
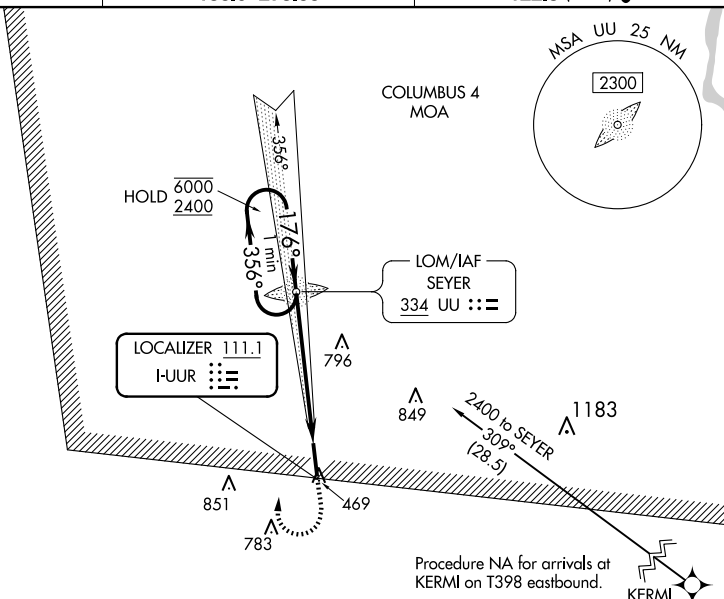
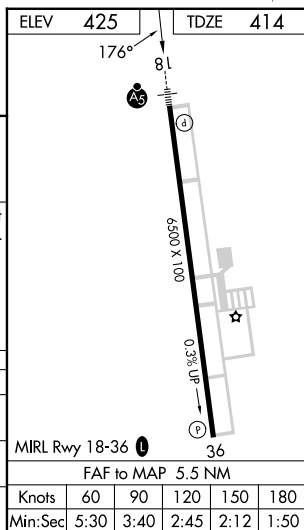


ILS or LOC RWY 18
ROSCOE TURNER (CRX)

MISSED APPROACH: Climb to 1000 then climbing right turn to 2400 direct UU LOM and hold, continue climb-in-hold to 2400.

UNICOM
122.8 (CTAF) **L**

Procedure NA for arrivals at
KERM on T398 eastbound.

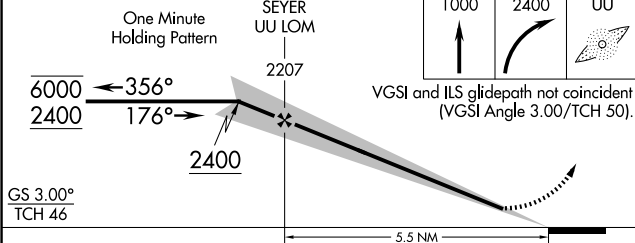

ILS or LOC RWY 18