

APP CRS  
004°

Rwy Idg  
TDZE  
Apt Elev

3244  
125  
125

RNAV (GPS) RWY 36  
WATTS-WOODLAND (O41)

▼


NA

DME/DME RNP- 0.3 NA.  
Procedure NA at night.  
Use Sacramento Intl altimeter setting; when not received,  
use Sacramento Exec altimeter setting and increase all  
MDA 20 feet.

MISSED APPROACH: Climbing left turn to 3000 direct CEVIT  
and hold.

TRAVIS APP CON  
126.6 281.45

UNICOM  
122.8 (CTAF)

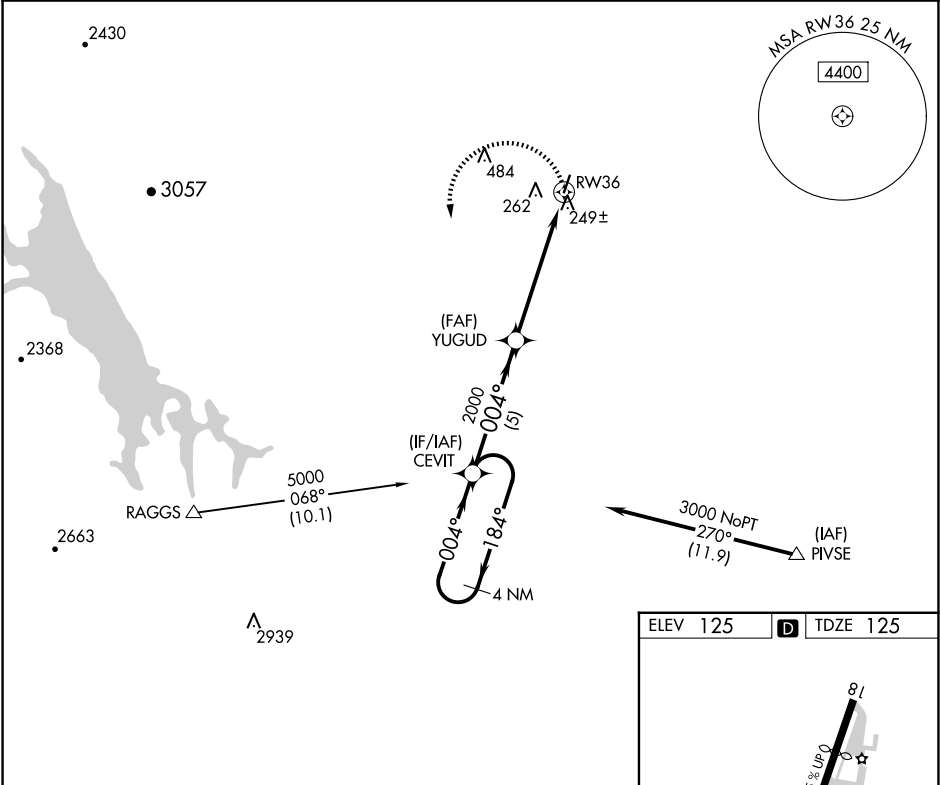

4 NM Holding Pattern

CEVIT

3000

184°

004°

YUGUD

3.05° TCH 40

2000

RW36

5 NM

5.7 NM

3000

CEVIT

| CATEGORY | A     | B           | C  | D |
|----------|-------|-------------|----|---|
| RNAV MDA | 560-1 | 435 (500-1) | NA |   |
| CIRCLING | 620-1 | 495 (500-1) | NA |   |

ELEV 125

TDZE 125

81

0.5% UP 0

3759 X 60

36

004°

MIRL Rwy 18-36