


VOR/DME VNY	APP CRS	Rwy Ldg TDZE	N/A
113.1	046°		N/A
Chan 78		Apt Elev	1003

VOR-A

WHITEMAN (WHP)

⚠ When local altimeter setting not received, use Burbank altimeter setting. Procedure NA at night.	MISSED APPROACH: Climbing left turn to 3900 direct VNY VOR/DME then on VNY VOR/DME R-255 to CANOG INT/ 5.1 DME and hold.
--	---

ATIS	SOCAL APP CON	WHITEMAN TOWER ★	GND CON	UNICOM
132.1	120.4 360.6 (NORTH) 134.2 338.2 (WEST)	135.0 (CTAF)	125.0	122.95

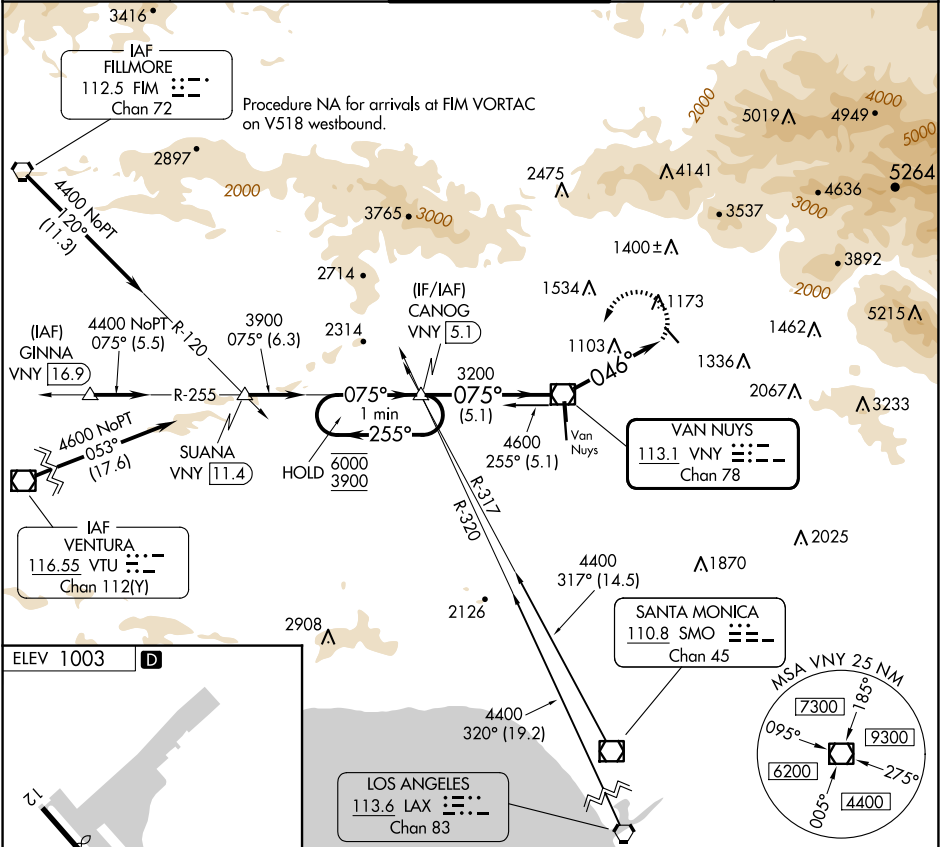

ELEV 1003	D
12	30
TWR	4120 X75
100± UP	
046°	
REIL Rwy 12 and 30	
MIRL Rwy 12-30	
FAF to MAP 4 NM	
Knots	60 90 120 150 180
Min:Sec	4:00 2:40 2:00 1:36 1:20

CATEGORY	A	B	C	D
One Minute Holding Pattern	1760-1 757 (800-1)	1860-1¼ 857 (900-1¼)	2200-3 1197 (1200-3)	NA
Ⓢ CIRCLING				