
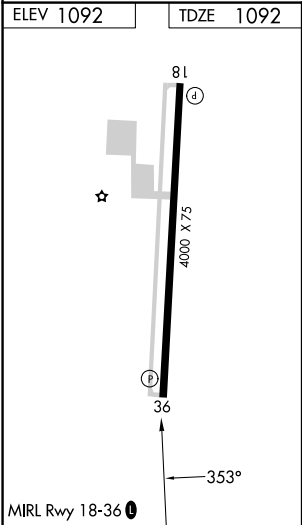


VORTAC SGF	APP CRS	Rwy Ldg	4000
116.9	353°	TDZE	1092
Chan 116		Apt Elev	1092

VOR/DME RWY 36
BOLIVAR MUNI (M17)

▼ ▲ NA	Use Springfield-Branson Ntl altimeter setting. Circling Rwy 18 NA at night.	MISSED APPROACH: Climb to 3000 via SGF R-356 to SIVYA/SGF 24.7 DME and hold.
--	--	---

SPRINGFIELD APP CON 124.95 318.2	UNICOM 123.0 (CTAF) 0
-------------------------------------	--------------------------

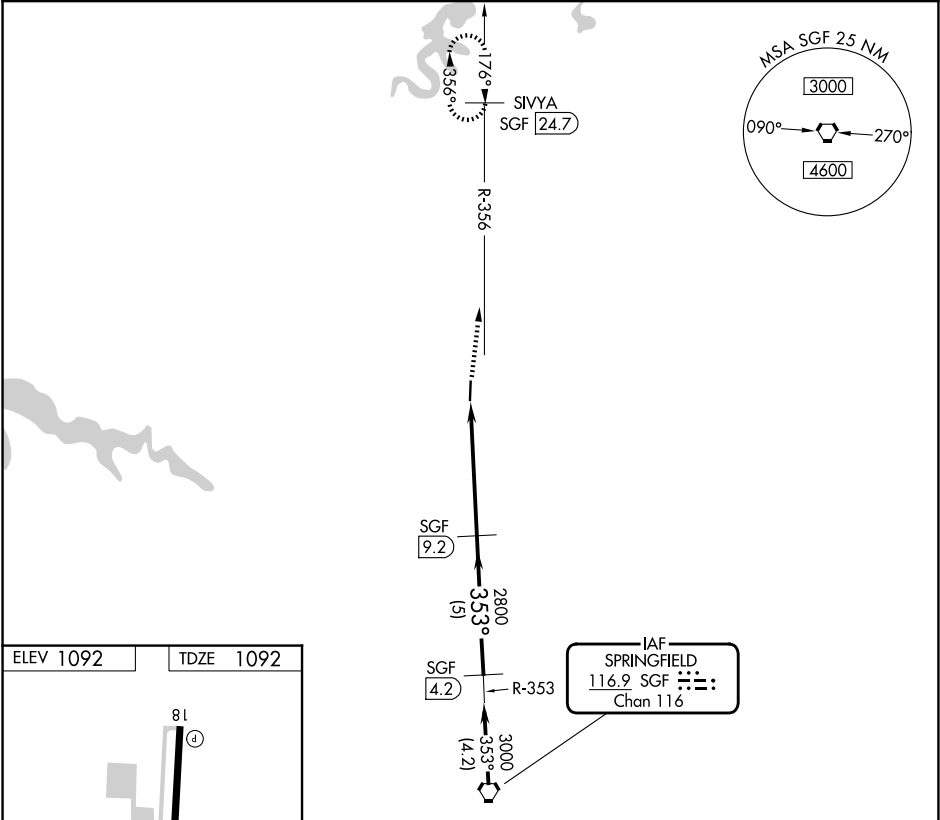

	3000	SIVYA SGF 24.7	SGF 9.2	SGF 4.2	3000
	SGF R-356				
	SGF 14.2		2800	353°	3000
			5 NM	5 NM	
					Procedure Turn NA
CATEGORY	A	B	C	D	
S-36	1700-1	608 (700-1)		NA	
CIRCLING	1700-1	608 (700-1)		NA	