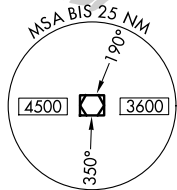


ILS or LOC RWY 13
BISMARCK MUNI (BIS)

MISSED APPROACH: Climb to 2200 then climbing left turn to 3600 direct BIS VOR/DME and hold, continue climb-in-hold to 3600.

UNICOM
122.95

BISMARCK MUNI (BIS)
ILS or LOC RWY 13