


LOC/DME I-FLO 109.1 Chan 28	APP CRS 093°	Rwy Ldg 6502 TDZE 147 Apt Elev 147	ILS or LOC RWY 9 FLORENCE RGNL (FLO)	
---	------------------------	---	---	--

RNP APCH - GPS. DME required.	MALSR	MISSED APPROACH: Climb to 2000 direct ESVAC and hold.
Circling Rwy 1, 19 NA at night. For inop ALS, increase S-LOC 9 Cats C and D visibilities to 2 SM.		

ATIS 123.625	FLORENCE APP CON★ 118.6 341.7 (256°-074°) 135.25 316.15 (075°-255°)	FLORENCE TOWER★ 125.1 (CTAF) 353.85	GND CON 121.9 353.85	UNICOM 122.95
------------------------	---	--	--------------------------------	-------------------------

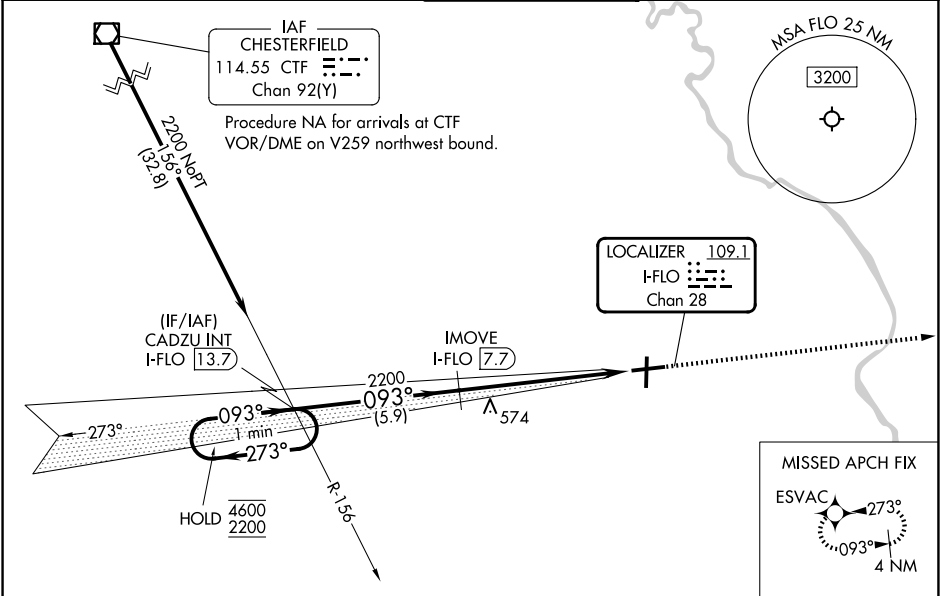

One Minute Holding Pattern		2000		ESVAC	
4600 2200 GS 3.00° TCH 59		CADZU INT I-FLO 13.7		IMOVE I-FLO 7.7	
273° 093°		2200		I-FLO 3.5 I-FLO 1.5	
		5.9 NM		4.2 NM	
				2.1 NM	
CATEGORY	A	B	C	D	
S-ILS 9	347-1/2 200 (200-1/2)				
S-LOC 9	860-1/2	713 (800-1/2)	860-1 5/8	713 (800-1%)	
CIRCLING	860-1	713 (800-1)	900-2 1/4 753 (800-2 1/4)	900-2 1/2 753 (800-2 1/2)	
REIL Rws 1, 19 and 27 HIRL Rwy 9-27 MIRL Rwy 1-19					
FAF to MAP 6.3 NM					
Knots		60	90	120	150 180
Min:Sec		6:18	4:12	3:09	2:31 2:06