


VOR/DME FBR	APP CRS	Rwy Ldg	6404
114.45	215°	TDZE	7018
Chan 91(Y)		Apt Elev	7038

VOR RWY 22
FORT BRIDGER (FBR)

NA Circling NA to Rwys 7 and 25. When local altimeter setting not received, use Evanston altimeter setting and increase all MDAs 100 feet, increase S-22 Cats C and D and Circling Cat C visibility ¼ SM, and Circling Cat D visibility ½ SM.	MISSED APPROACH: Climbing right turn to 9000 in FBR VOR/DME holding pattern.
--	---

AWOS-3PT 118.8	SALT LAKE CENTER 124.35 353.5	UNICOM 122.8 (CTAF) 0
-------------------	----------------------------------	--------------------------

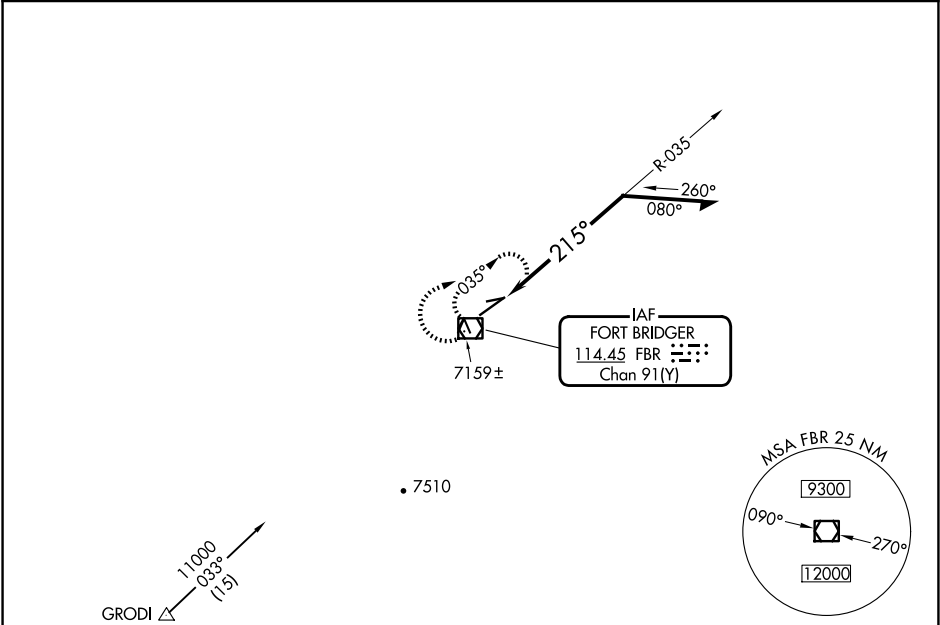

ELEV 7038		TDZE 7018	
9000 FBR 8900 8500 035° 215° Remain within 10 NM			

REIL Rwys 4 and 22 0

MIRL Rwy 4-22 0