
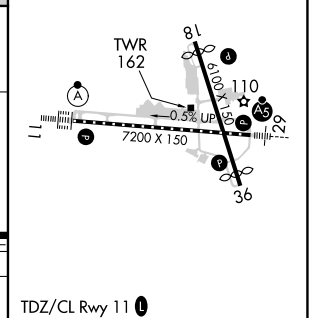


ILS RWY 11 (SA CAT I)
PORTLAND INTL JETPORT (PWM)

MISSED APPROACH: Climb to 600 then climbing right turn to 3000 direct ENE VOR/DME and hold.



SA CATEGORY I ILS - SPECIAL AIRCREW
& AIRCRAFT CERTIFICATION REQUIRED

TDZ/CL Rwy 11 **L**
MIRL Rwy 18-36 **L**
HIRL Rwy 11-29 **L**
REIL Rwy 18 and 36 **L**