

LOC I-BAF	APP CRS	Rwy Ldg
111.9	204°	8919
		TDZE
		270
		Apt Elev
		270


ILS or LOC RWY 20
WESTFIELD-BARNES RGNL (BAF)

⚠ Circling Rwy 15 NA at night. DME from BAF VORTAC. DME use requires simultaneous reception of I-BAF and BAF DME. For inop ALS, increase S-ILS 20 Cat E visibility to RVR 4000; increase S-LOC 20 Cat E visibility to 3 SM; increase PETGE fix minimums S-LOC 20 Cat E visibility to 1½ SM.


MALSR

MISSED APPROACH: Climb to 1300 then climbing right turn to 4000 direct CTR VOR/DME and hold, continue climb-in-hold to 4000.

ATIS	BRADLEY APP CON	WESTFIELD TOWER ★	GND CON
127.1 263.15	125.35 281.5	125.075 (CTAF) 0 251.1	121.7 289.4

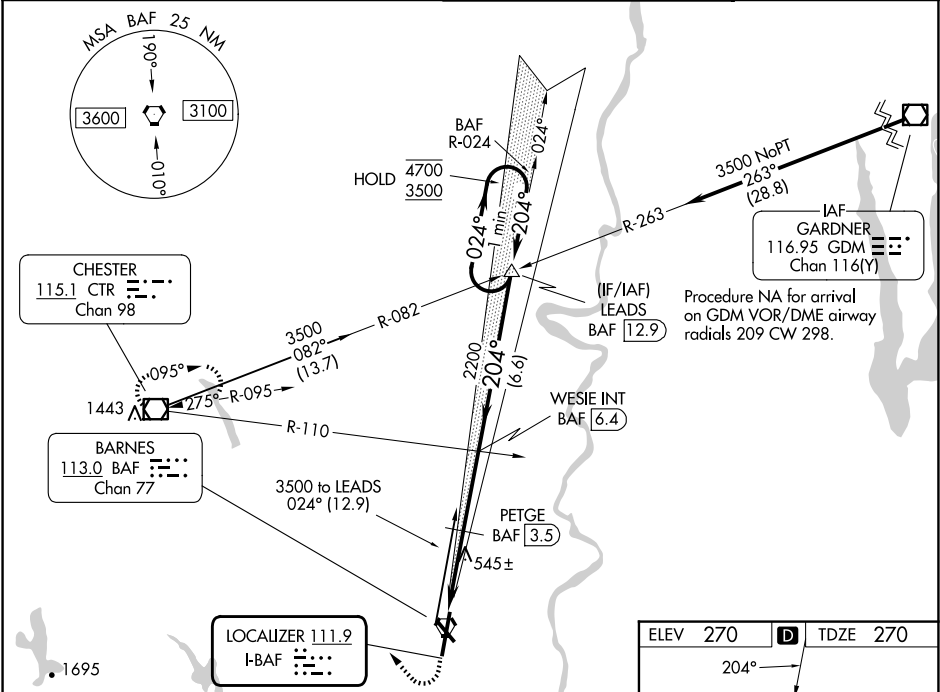

1300 ↑	4000 ↗	CTR 	* LOC only.	WESIE INT BAF 6.4	LEADS BAF 12.9	One Minute Holding Pattern
BAF 0.5 	BAF 2 	PETGE BAF 3.5	2200	204°	024° → 4700 ← 204° 3500	GS 3.00° TCH 50
CATEGORY	A	B	C	D	E	
S-ILS 20	520/24 250 (300-½)					
S-LOC 20	1260/40 990 (1000-¾)	1260/55 990 (1000-1)	1260-2½ 990 (1000-2½)			
CIRCLING	1260-1¼ 990 (1000-1¼)	1260-1½ 990 (1000-1½)	1260-3 990 (1000-3)	1660-3 1390 (1400-3)		
PETGE FIX MINIMUMS (DME REQUIRED)						
S-LOC 20	800/24	530 (600-½)	800/55		530 (600-1)	
CIRCLING	1160-1¼	890 (900-1¼)	1160-2¾ 890 (900-2¾)		1660-3 1390 (1400-3)	

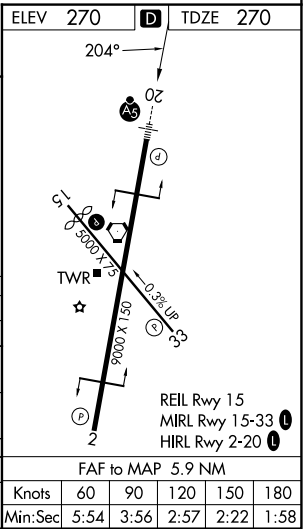

NE-1, 30 OCT 2025 to 27 NOV 2025

NE-1, 30 OCT 2025 to 27 NOV 2025