


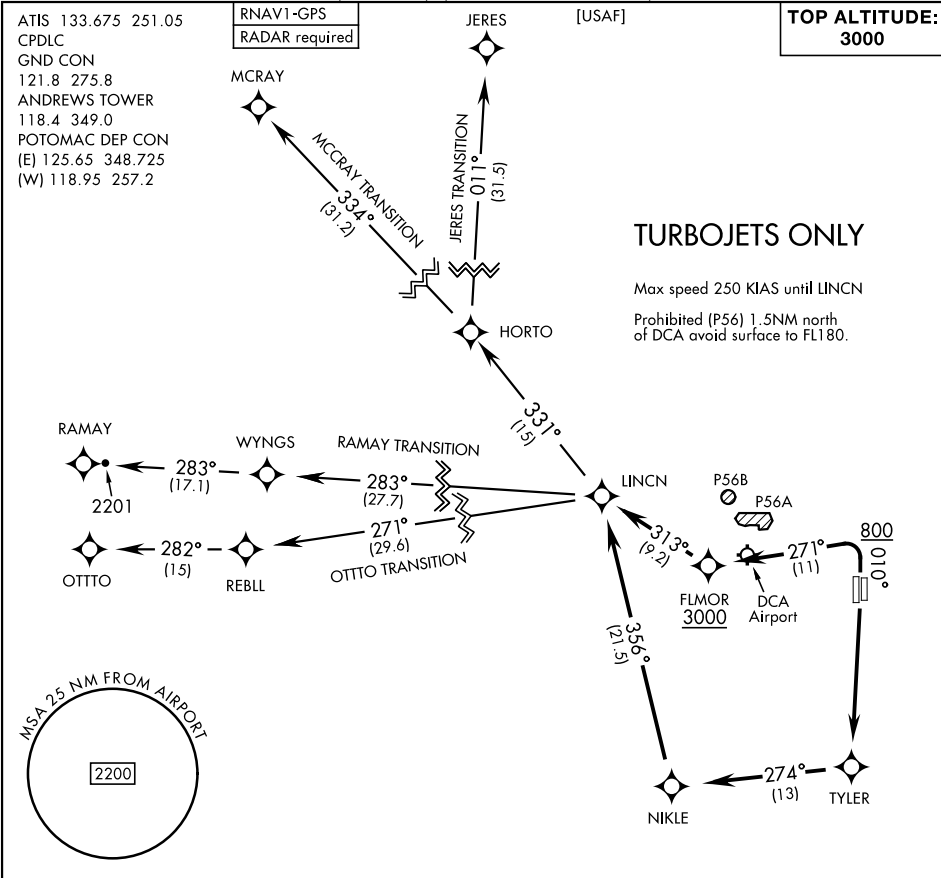

DEPARTURE ROUTE DESCRIPTION

**TAKEOFF RWY 01L/R:** Climb heading 010° to 800, then climbing left turn to 3000 direct FLMOR. Then via depicted route to LINCN, thence...

**TAKEOFF RWY 19L/R:** Climb direct TYLER then via depicted route to LINCN, thence...

...on assigned transition. Maintain 3000, expect further clearance to filed alt within ten (10) minutes after departure.

JERES TRANSITION (LINCN2.JERES)

MCCRAY TRANSITION (LINCN2.MCRAY)

OTTO TRANSITION (LINCN2.OTTO)

RAMAY TRANSITION (LINCN2.RAMAY)