

LOC/DME I-RSR	APP CRS	Rwy Ldg	7001
110.9	109°	TDZE	980
Chan 46		Apt Elev	1009

ILS RWY 11 (CAT II & III)

WORCESTER RGNL (ORH)



▼
▲

CAT II: RVR 1000 authorized with specific OPSPEC, MSPEC, or LOA approval and use of auto/land or HUD to touchdown. Procedure NA when tower closed.

ALSIF-2

MISSED APPROACH: Climb to 1800 then climbing right turn to 3100 on heading 230° and on GDM VOR/DME R-167 to LAWNRN/GDM 23 DME and hold, continue climb-in-hold to 3100.

ATIS 126.55	BRADLEY APP CON 119.0 327.1	WORCESTER TOWER ★ 120.5 (CTAF) 263.0	GND CON 123.85	UNICOM 122.95
----------------	--------------------------------	---	-------------------	------------------

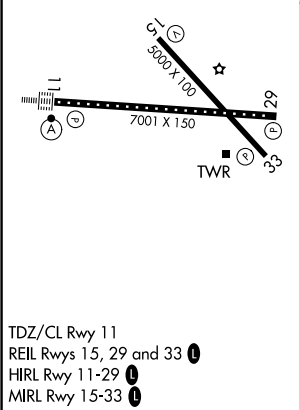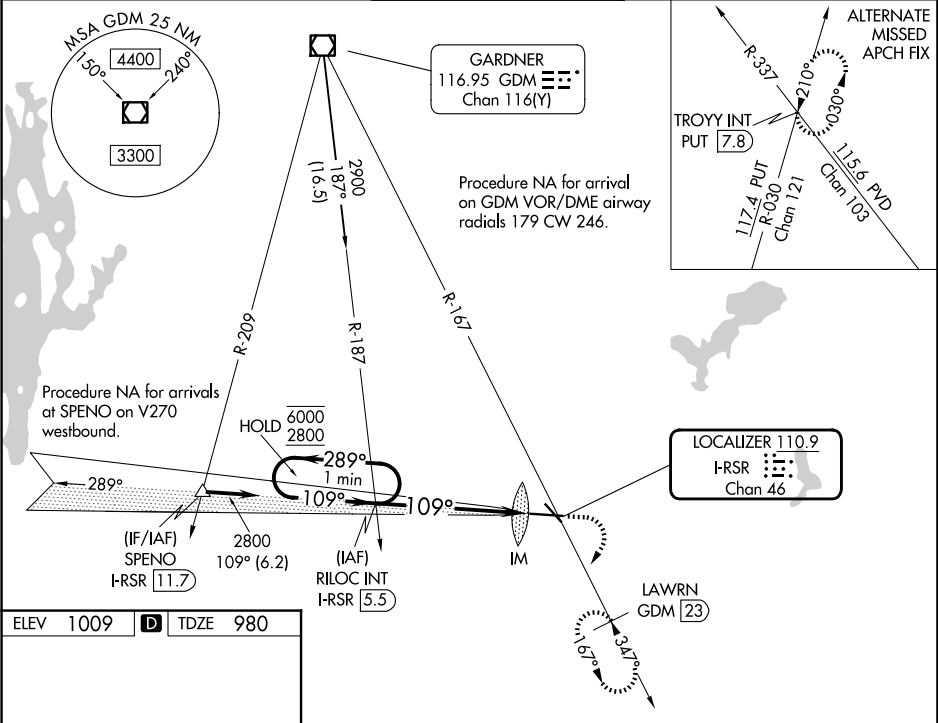

One Minute Holding Pattern

RILOC INT I-RSR 5.5

2800

6000 2800

289° 109° 109°

2800

GS 3.00° TCH 55

5.5 NM

1057

1800 3100

↑ hdg 230°

GDM R-167

LAWNRN GDM 23

CATEGORY	A	B	C	D
S-ILS 11	CAT II RA 119/12 100 DA 1080			
S-ILS 11	CAT III RVR 06			

CATEGORY II & III ILS - SPECIAL AIRCREW & AIRCRAFT CERTIFICATION REQUIRED