


HI-ILS Y or LOC Y RWY 13R

LOC/DME I-NQI 110.9 Chan 46	APCH CRS 130°	Rwy Idg TDZE Arpt Elev 8000 50 50	[USN]	KINGSVILLE NAS (KNQI)
---	-------------------------	---	-------	-----------------------


TACAN required

MISSED APPROACH: Climb to 500 then climbing right turn to 3000 and intercept NQI TACAN R-184 to BRAMA and hold.

ATIS ★ 282.25	APP CON 119.9 290.45	TOWER ★ 124.1 377.05	GND CON 239.05	CLNC DEL 328.4	ASR/ PAR
-------------------------	--------------------------------	--------------------------------	--------------------------	--------------------------	-------------

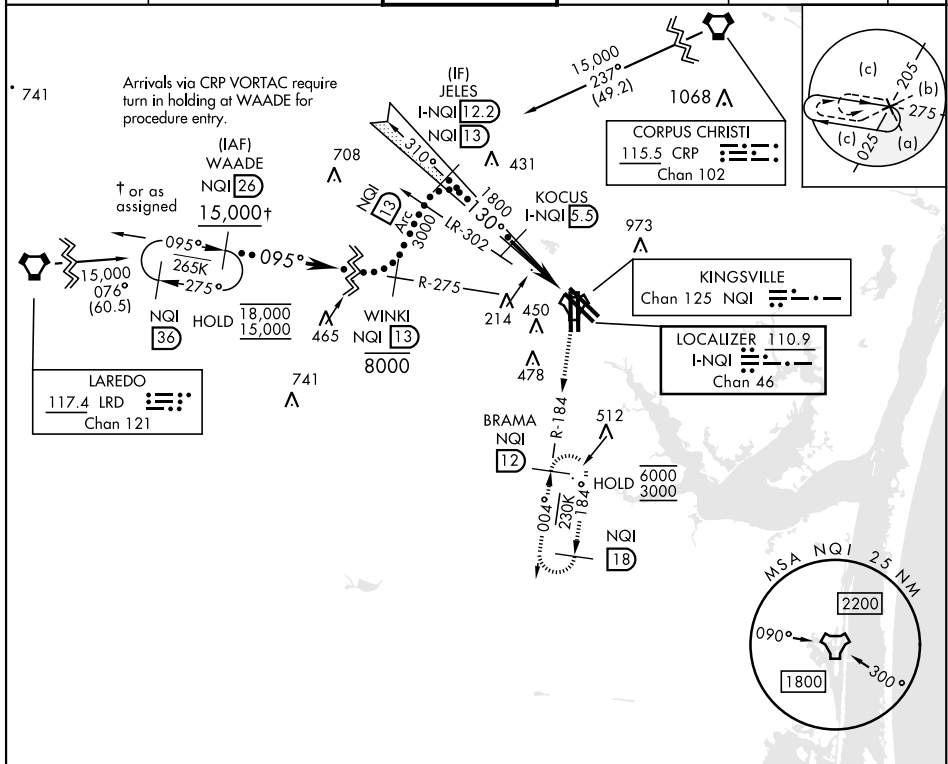

EMERG SAFE ALT 100 NM 16,200

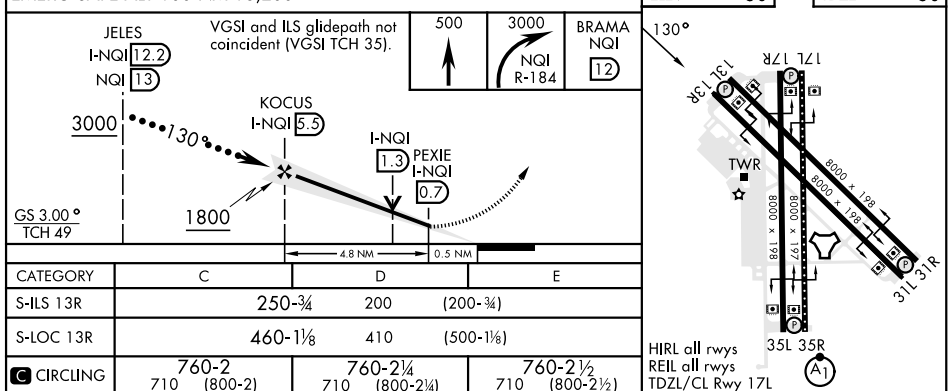

HI-ILS Y or LOC Y RWY 13R