


ILS Z or LOC Z RWY 19
RUTLAND/SOUTHERN VERMONT RGNL (RUT)

MALCD




MISSED APPROACH: Climb to 1900 then climbing right turn to 5700 on heading 360° and CAM VOR/DME R-033 to KOPVE/I-RTUT 16.31 DME and hold. If unable to meet climb gradient, see ILS Y or LOC Y Rwy 19. # Missed approach requires minimum climb of 425 feet per NM to 3200.


AWOS-3PT 118.375	BOSTON CENTER 135.7 282.2	UNICOM 122.8 (CTAF) 0
----------------------------	-------------------------------------	---------------------------------

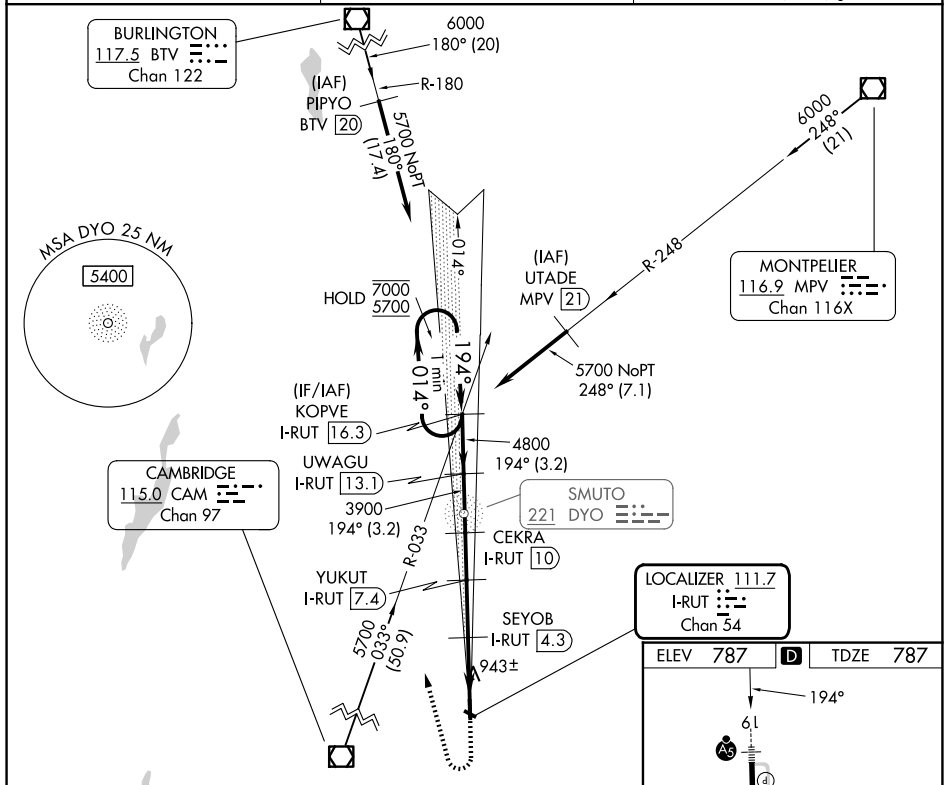

1900 ↑	5700 ↗ hdg 360°	CAM R-033	KOPVE I-RUT 16.3
-----------	--------------------------	--------------	------------------------

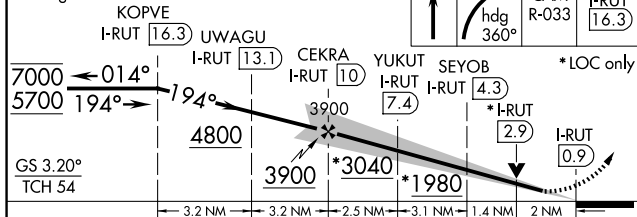

CATEGORY	A	B	C	D
S-ILS 19 #	1451-1½ 664 (700-1½)			
S-LOC 19 #	1520-½	733 (800-½)	1520-1½	733 (800-1½)
CIRCLING	2160-1¼	2160-1½	2520-3	2760-3
	1373 (1400-1¼)	1373 (1400-1½)	1733 (1800-3)	1973 (2000-3)

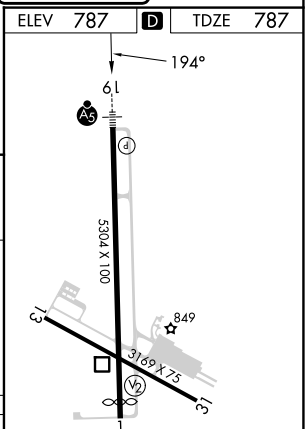RUTLAND/SOUTHERN VERMONT RGNL (RUT)
ILS Z or LOC Z RWY 19