


VOR/DME VCN 115.2 Chan 99	APP CRS 013°	Rwy Idg TDZE Apt Elev N/A N/A 150	VOR-B PINE VALLEY (19N)
---	------------------------	---	---

▼ Procedure NA at night. Visibility reduction by helicopters NA. ▲ NA Use Mount Holly altimeter setting, when not received, use Philadelphia Intl altimeter setting and increase MDA 20 feet.	MISSED APPROACH: Climbing right turn to 2100 direct VCN VOR/DME and hold.
--	---

MC GUIRE APP CON 126.475 363.8	UNICOM 123.0 (CTAF) 0
--	--

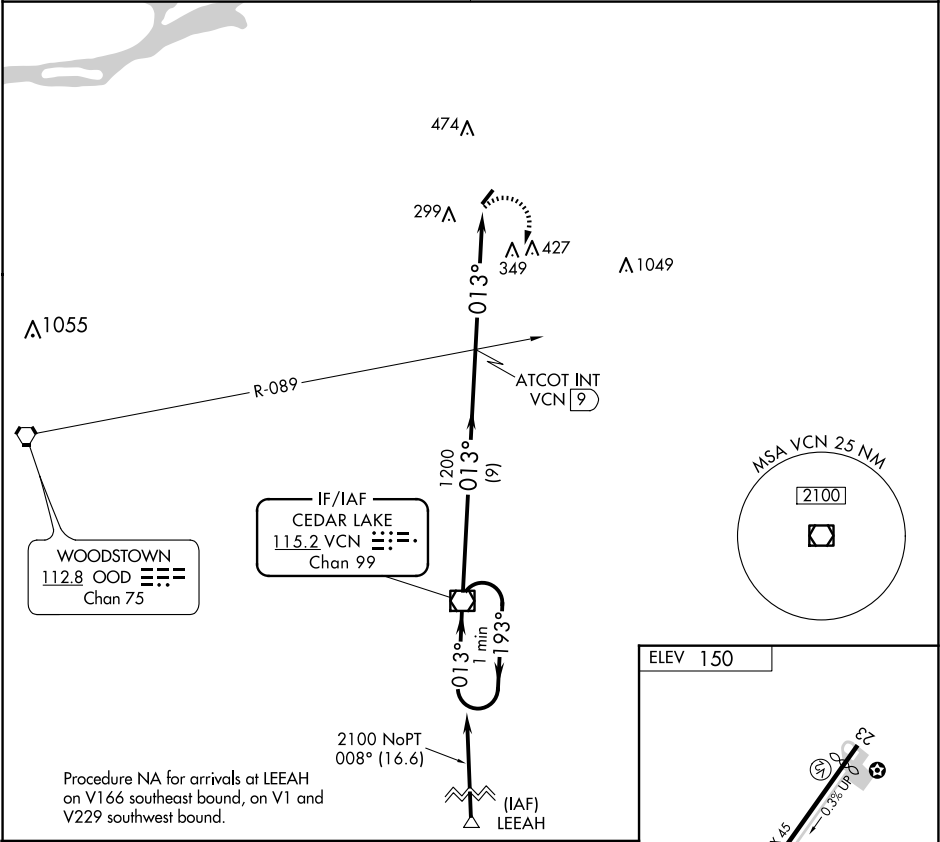

One Minute Holding Pattern		VCN VOR/DME		2100	VCN	
2100 ← 193°		013° →		ATCOT INT VCN 9		
		013°		VCN 14.3		
		1200				
		9 NM		5.3 NM		
CATEGORY	A	B	C	D	FAF to MAP 5.3 NM	
CIRCLING	900-1 750 (800-1)	NA				Knots
						60
						90
						120
						150
						180
						Min:Sec
						5:18
						3:32
						2:39
						2:07
						1:46