

WAAS CH 86505 W06A	APP CRS 057°	Rwy Idg TDZE Apt Elev	5000 302 302
--	------------------------	-----------------------------	---

RNAV (GPS) RWY 6

WOODWARD FLD (CDN)


▼

▲NA

Baro-VNAV NA when using Columbia altimeter setting. When local altimeter setting not received, use Columbia altimeter setting and increase all DAs/MDAs 100 feet; increase LNAV and Circling visibility Cats C/D ¼ SM. For uncompensated Baro-VNAV systems, procedure NA below -15°C (5°F) or above 48°C (118°F). DME/DME RNP-0.3 NA. Visibility reduction by helicopters NA.

MISSED APPROACH: Climb to 3000 direct IBAYE and hold.

AWOS-3PT 119.975	SHAW APP CON ★ 125.4 318.1	UNICOM 123.0 (CTAF) 0
----------------------------	--------------------------------------	---------------------------------

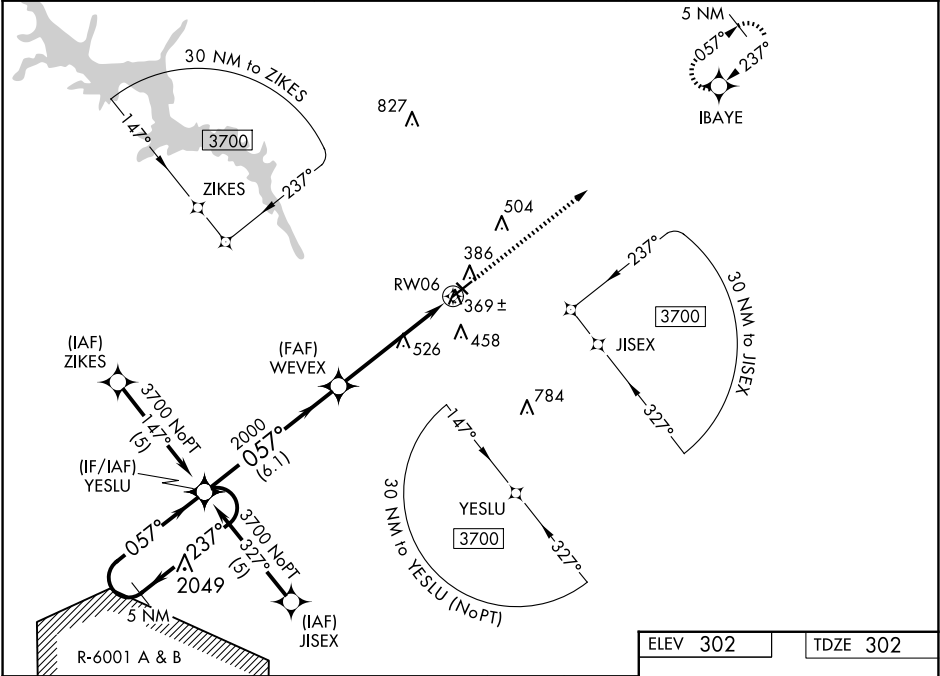

5 NM

Holding Pattern

3000

IBAYE

↑

✦

YESLU

3700

←237°

057°→

2000

↖↗

WEVEX

RW06

6.1 NM

5.2 NM

GP 3.00°

TCH 31

CATEGORY	A	B	C	D
LPV DA	582-1 280 (300-1)			
LNAV/VNAV DA	713-1½ 411 (500-1½)			
LNAV MDA	780-1	478 (500-1)	780-1¼ 478 (500-1¼)	780-1½ 478 (500-1½)
CIRCLING	840-1	538 (600-1)	840-1½ 538 (600-1½)	900-2 598 (600-2)

MIRL Rwy 6-24

REIL Rwy 6 and 24

057°

2998 X 100

5000 X 100

32

31

30

29