


LOC/DME I-CXO	APP CRS	Rwy Idg	7501
108.7	140°	TDZE	236
Chan 24		Apt Elev	245

ILS or LOC RWY 14
CONROE/NORTH HOUSTON RGNL (CXO)

ADF required.			MALSR 	MISSED APPROACH: Climb to 1000 then climbing left turn to 2100 direct ALIBI LOM/I-CXO 6.4 DME and hold.		
T A NA						
ATIS 118.325	HOUSTON APP CON 119.7 281.4	CONROE TOWER ★ 124.125 (CTAF) 0	GND CON 120.45	CLNC DEL 120.45	CLNC DEL 119.55 (When twr closed)	

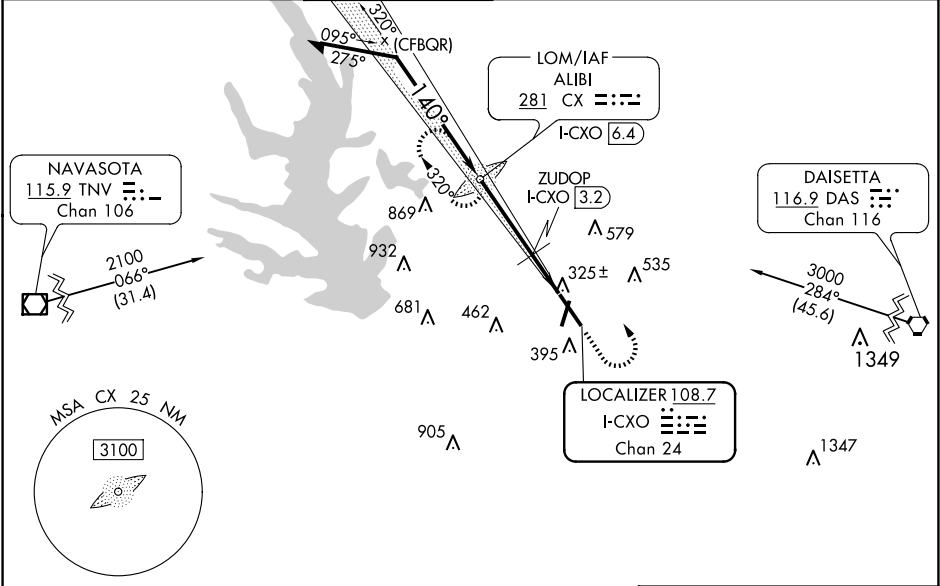

ELEV 245 D TDZE 236				
140° 5.1 NM from FAF				
TWR 346				
REIL Rwy 32				
MIRL Rwy 1-19				
HIRL Rwy 14-32				
FAF to MAP 5.1 NM				
Knots 60 90 120 150 180				
Min:Sec 5:06 3:24 2:33 2:02 1:42				

CATEGORY	A	B	C	D
S-ILS 14	436-1/2 200 (200-1/2)			
S-LOC 14	840-1/2	604 (600-1/2)	840-1 3/8	604 (600-1 3/8)
CIRCLING	840-1	595 (600-1)	880-1 3/4 635 (700-1 3/4)	960-2 1/4 715 (800-2 1/4)
ZUDOP FIX MINIMUMS				
S-LOC 14	640-1/2	404 (400-1/2)	640-3/4	404 (400-3/4)
CIRCLING	700-1	455 (500-1)	880-1 3/4 635 (700-1 3/4)	960-2 1/4 715 (800-2 1/4)