
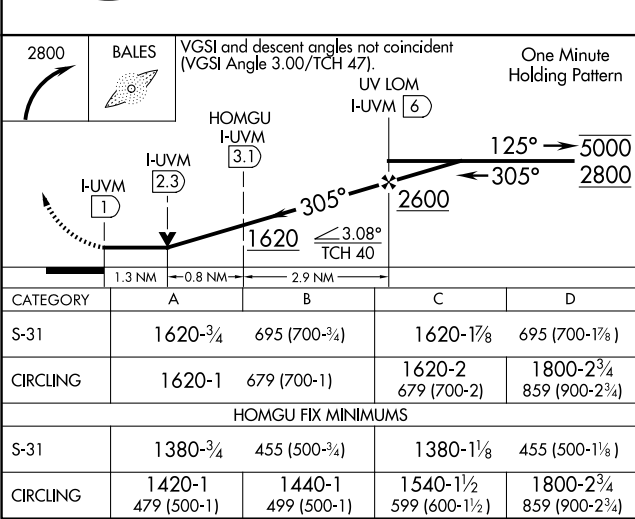


LOC/DME I-UVM 111.3 Chan 50	APP CRS 305°	Rwy Ldg 5002 TDZE 925 Apt Elev 941	LOC RWY 31 BLUE RIDGE (MTV)
---	------------------------	---	--------------------------------

ADF or DME required for procedure entry. ADF required.	ODALS 	MISSED APPROACH: Climbing right turn to 2800 direct BALES LOM/I-UVM 6 DME and hold, continue climb in hold to 2800.
Rwy 31 helicopter visibility reduction below 3/4 SM NA. For inop ALS while using HOMGU fix minimums, increase Cat C/D visibility to 1 1/2 SM.		
-16°C		

AWOS-3 118.45	GREENSBORO APP CON 124.35 269.225	CLNC DEL 124.85	UNICOM 122.7 (CTAF) 0
-------------------------	---	---------------------------	---------------------------------

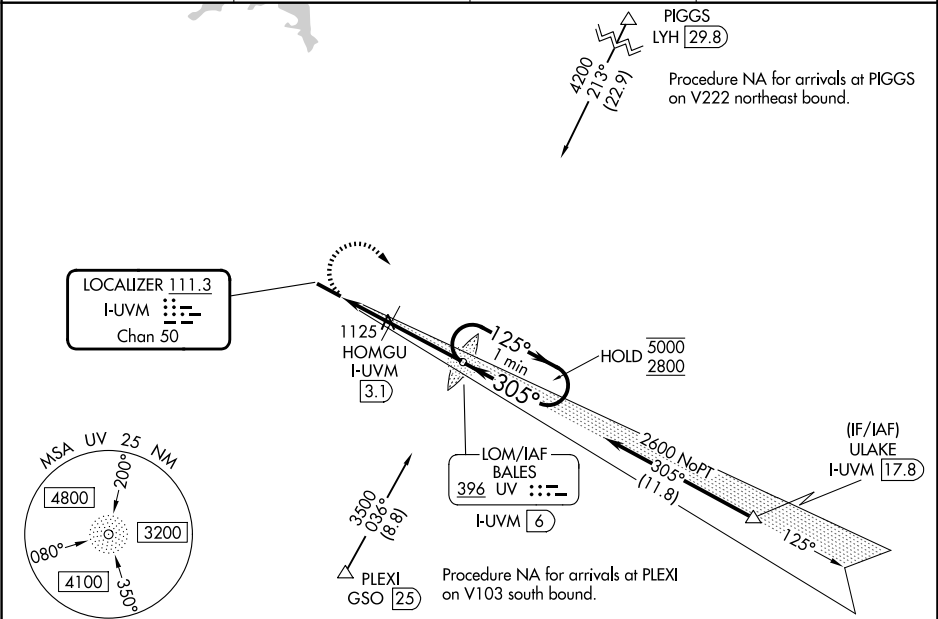

ELEV 941	TDZE 925
MIRL Rwy 13-31 0 REIL Rwys 13 and 31 0	
FAF to MAP 5 NM	
Knots	60 90 120 150 180
Min:Sec	5:00 3:20 2:30 2:00 1:40