

ILS or LOC RWY 23R


LOC I-FFO 109.7	APCH CRS 233°	Rwy Idg 12,600 THRE 823 Arpt Elev 823
---------------------------	-------------------------	--

[USAF]

WRIGHT-PATTERSON AFB (KFFO)

DME or RADAR required for Localizer.	ALSF-1 	† MISSED APPROACH: Climb via FFO R-233 to 2000, at 3 DME turn left direct CLACK to 3000 and hold.
▼ *When ALS inop, increase RVR to 40 and vis to ¾ mile. **When ALS inop, increase CAT AB RVR to 55 and vis to 1 mile, CAT CDE vis to 1¾ miles.		

ATIS 124.475 269.9	COLUMBUS APP CON 118.85 269.275	PATTERSON TOWER 127.8 281.45	GND CON 121.8 335.8
------------------------------	---	--	-------------------------------

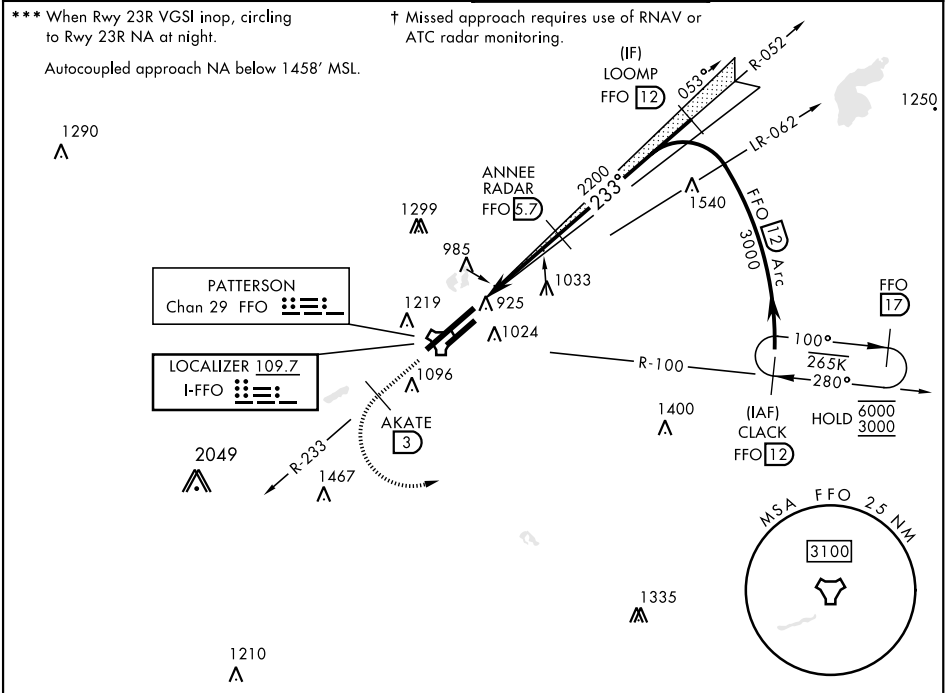

EMERG SAFE ALT 100 NM 3700

ILS or LOC RWY 23R