


VORTAC IRW 114.1 Chan 88	APP CRS 300°	Rwy Ldg TDZE Apt Elev N/A N/A 1354
--	------------------------	--

VOR-B

CLARENCE E PAGE MUNI (R/C/E)

▼ ▲ When local altimeter setting not received, use Wiley Post altimeter setting and increase all MDA 40 feet.	MISSED APPROACH: Climbing left turn to 3000 direct IRW VORTAC and hold.
--	---

AWOS-3 125.05	OKE CITY APP CON 124.6 266.8	UNICOM 123.0 (CTAF) 0
-------------------------	--	--

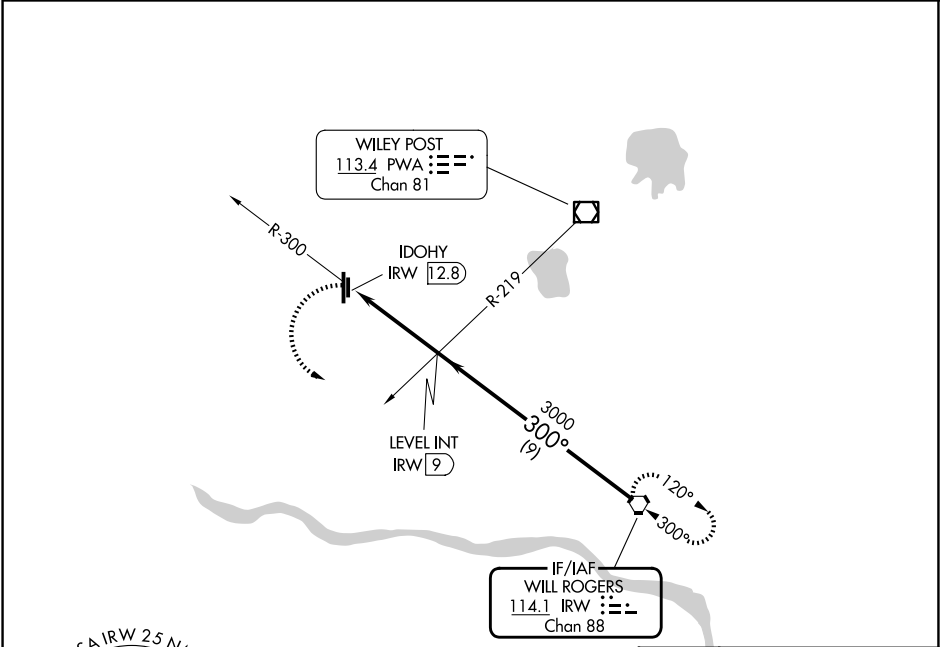

Procedure NA for arrival at IRW VORTAC on airway radials 241 CW 292.

