


LOC/DME I-FLO 109.1 Chan 28	APP CRS 093°	Rwy Ldg TDZE 147 Apt Elev 147	ILS or LOC RWY 9 FLORENCE RGNL (FLO)	
---	------------------------	---	---	--

RNP APCH - GPS. DME required.	MALSR	MISSED APPROACH: Climb to 2000 direct ESVAC and hold.
Circling Rwy 1, 19 NA at night. For inop ALS, increase S-LOC 9 Cats C and D visibilities to 2 SM.		

ATIS 123.625	FLORENCE APP CON★ 118.6 341.7 (256°-074°) 135.25 316.15 (075°-255°)	FLORENCE TOWER★ 125.1 (CTAF) 0 353.85	GND CON 121.9 353.85	UNICOM 122.95
------------------------	---	--	--------------------------------	-------------------------

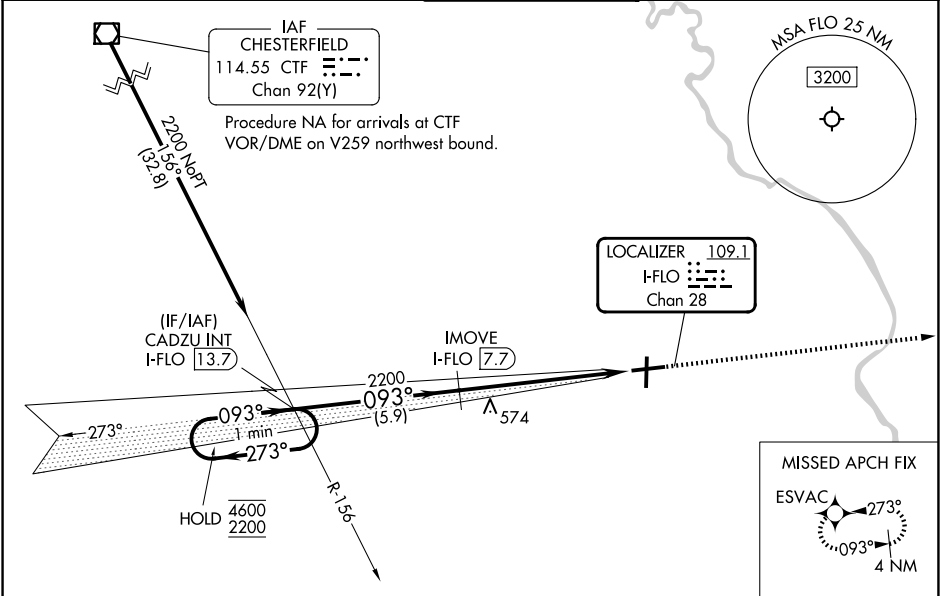

One Minute Holding Pattern		2000		ESVAC	
CADZU INT I-FLO 13.7		IMOVE I-FLO 7.7			
4600 2200 273° 093°		2200		I-FLO 3.5	
GS 3.00° TCH 59				I-FLO 1.5	
		5.9 NM		4.2 NM	
				2.1 NM	
CATEGORY	A	B	C	D	
S-ILS 9	347-1½ 200 (200-½)				
S-LOC 9	860-½	713 (800-½)	860-1½	713 (800-1½)	
CIRCLING	860-1	713 (800-1)	900-2¼ 753 (800-2¼)	900-2½ 753 (800-2½)	

ELEV 147	TDZE 147
TWR 61 6502 X 150 6000 X 150 0.4% UP 0.8% UP 093°	
REIL Rws 1,19 and 27 HIRL Rwy 9-27 MIRL Rwy 1-19	
FAF to MAP 6.3 NM	
Knots	60 90 120 150 180
Min:Sec	6:18 4:12 3:09 2:31 2:06