


LOC/DME I-OJW <u>108.3</u> Chan 20	APP CRS 183°	Rwy Ldg 5700 TDZE 54 Apt Elev 56
--	------------------------	---

LDA RWY 20R
JOHN WAYNE/ORANGE COUNTY (SNA)

DME required.		MALSR 	MISSED APPROACH: Climb to 1000 then climbing right turn to 3000 direct SLI VORTAC and hold.
  Circling Rwy 20L NA at night. For inop ALS, increase S-LDA 20R Cat C/D visibility to RVR 6000.			

D-ATIS 126.0	SOCAL APP CON 121.3 263.1	JOHN WAYNE TOWER* 126.8 (CTAF) 0 343.625	GND CON 120.8	UNICOM 122.95
------------------------	-------------------------------------	--	-------------------------	-------------------------

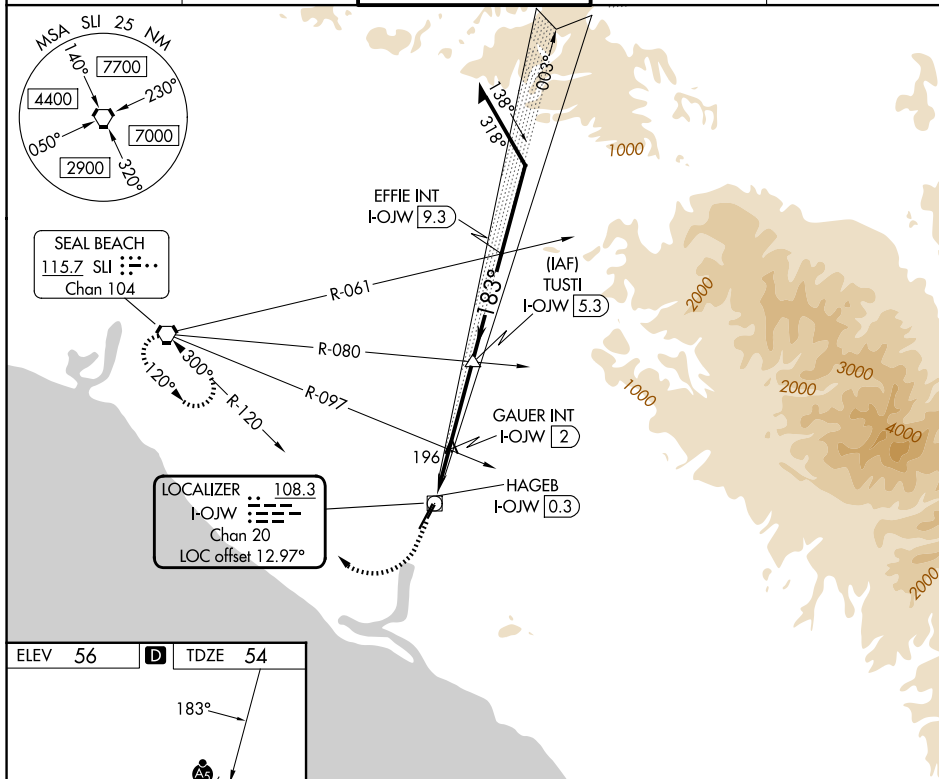

REIL Rwy 20L
MIRL Rwy 2R-20L
HIRL Rwy 2L-20R