


VOR RWY 13
VICTORIA RGNL (VCT)

For inop ALS, increase Cat C/D/E visibility to 1 $\frac{3}{8}$ SM.



MISSED APPROACH:
Climbing left turn to 2200
direct VCT VOR/DME and
hold, continue climb-in-hold
to 2200.

Procedure NA for arrival on PSX VORTAC
airway radials 218 CW 233.

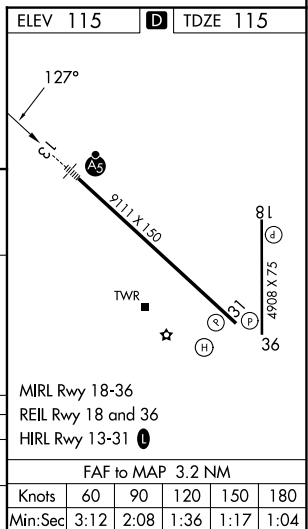

VICTORIA RGNL (VCT)
VOR RWY 13