


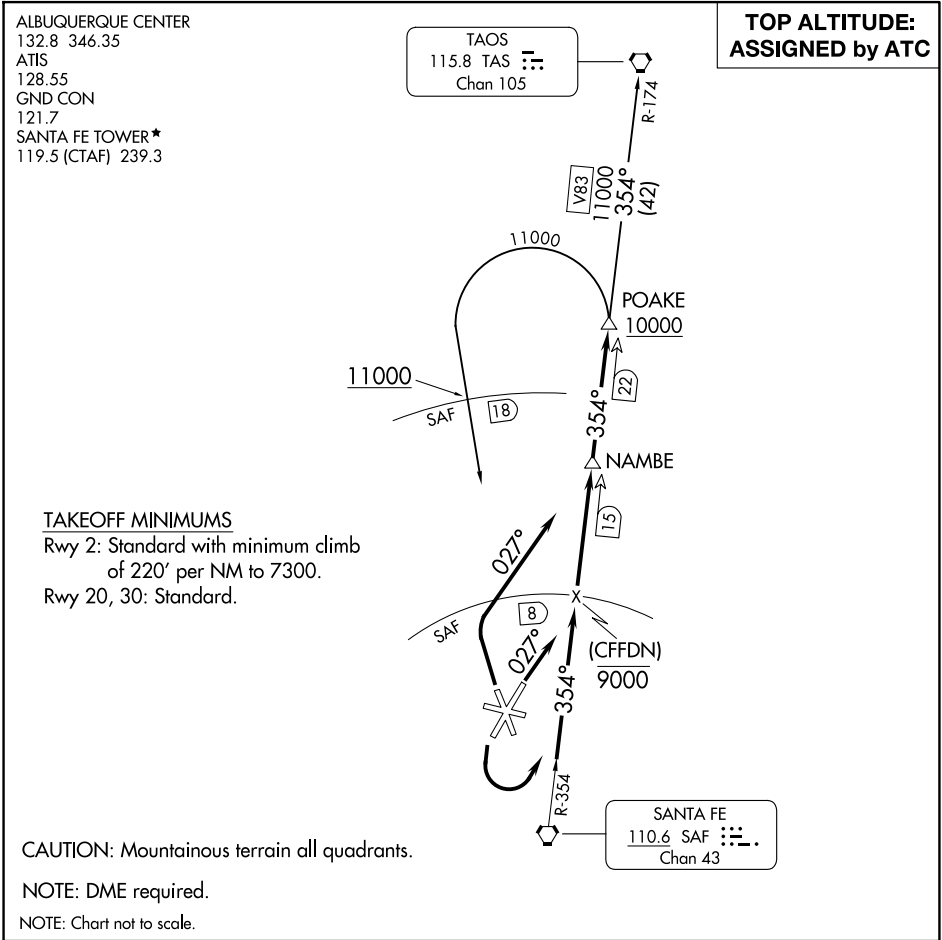

DEPARTURE ROUTE DESCRIPTION

TAKEOFF RUNWAY 2: Climb heading 027° thence. . . .
TAKEOFF RUNWAY 20: Climbing left turn thence. . . .
TAKEOFF RUNWAY 33: Climbing right turn to heading 027° thence. . . .
. . . .Intercept and proceed on SAF R-354 to POAKE DME fix. Cross 8 DME ARC
north of SAF VORTAC at or below 9000. Cross POAKE DME fix at or
above 10000. Then on (transition) or (assigned route).

SANTA FE TRANSITION (POAKE2.SAF): From POAKE DME fix left turn direct
SAF VORTAC. Cross 18 DME north of SAF VORTAC at/above 11000'.

TAOS TRANSITION (POAKE2.TAS): From POAKE DME fix via SAF R-354 and
TAS R-174 to TAS VORTAC.