
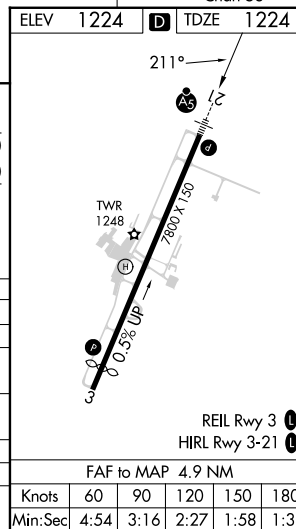


ILS or LOC RWY 21
NORTH CENTRAL WEST VIRGINIA (CKB)

MISSED APPROACH: Climb to 1800 then climbing right turn to 3200 direct CKB VOR/DME and hold, continue climb-in-hold to 3200.

UNICOM
123.0

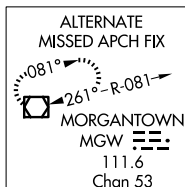

NORTH CENTRAL WEST VIRGINIA (CKB)
ILS or LOC RWY 21