

LOC/DME I-ACY	APP CRS	Rwy Ldg
109.10	308°	10001
Chan 28		TDZE
		64
		Apt Elev
		75

ILS or LOC/DME RWY 31



ATLANTIC CITY INTL (ACY)

⚠

⚠

MISSED APPROACH: Climb to 500 then climbing right turn to 2000 via heading 130° and via ACY R-090 to SMITS INT/ ACY 11 DME and hold.

ATIS	ATLANTIC CITY APP CON	ATLANTIC CITY TOWER	GND CON	CLNC DEL
125.725 316.15	124.6 327.125	120.3 239.0	121.9 284.6	127.85 353.775

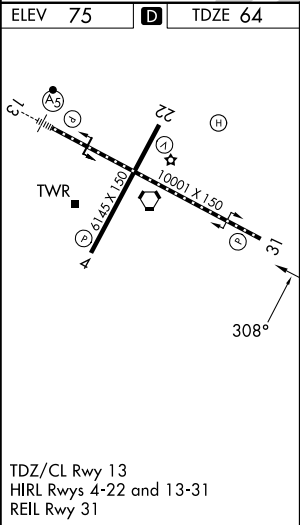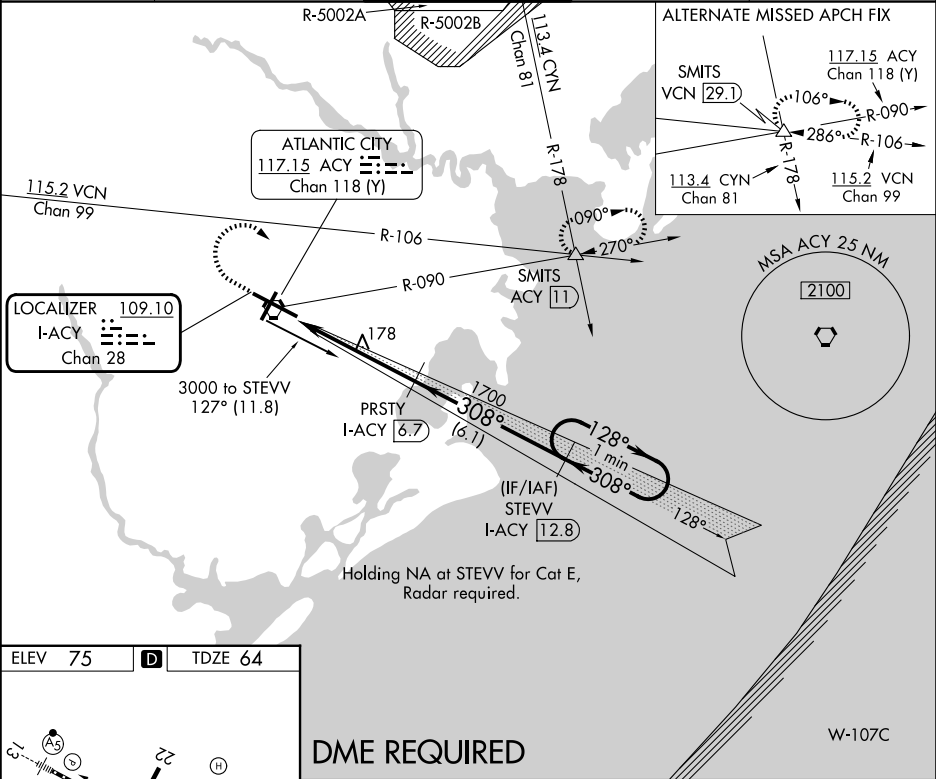

500	2000	ACY R-090	SMITS	Use I-ACY DME when on localizer course. VGSI and ILS glidepath not coincident (VGSI Angle 3.00/TCH 69).		One Minute Holding Pattern	
↑	hdg 130°			PRSTY I-ACY 6.7	STEVV I-ACY 12.8		
		I-ACY 1.8	I-ACY 3	1700	308°	128°	2000
						GS 3.00°	TCH 52
		1.2	3.7 NM	6.1 NM			
CATEGORY	A	B	C	D	E		
S-ILS 31	264/40 200 (200-¾)						
S-LOC 31	520/55	456 (500-1)	520-1½ 456 (500-1½)	520-1½	456 (500-1½)		
CIRCLING	540-1 465 (500-1)	600-1 525 (600-1)	620-1½ 545 (600-1½)	640-2 565 (600-2)	760-2½ 685 (700-2½)		