

LOC/DME I-FQV
109.7
Chan **34**

APP CRS
352°

Rwy Ldg
TDZE **177**
Apt Elev **234**

ILS or LOC RWY 35
PLATTSBURGH INTL (PBG)


DME required.
RNAV 1-GPS required.

MALSR

MISSED APPROACH: Climb to 700 then climbing right turn to 3000 direct JUTEK and hold.

▼
▲ For inop ALS, increase S-LOC 35 Cat C/D visibility to 1 SM.

ASOS 132.225	BURLINGTON APP CON ★ 121.1 278.8	UNICOM 122.7 (CTAF) ①
------------------------	--	---------------------------------

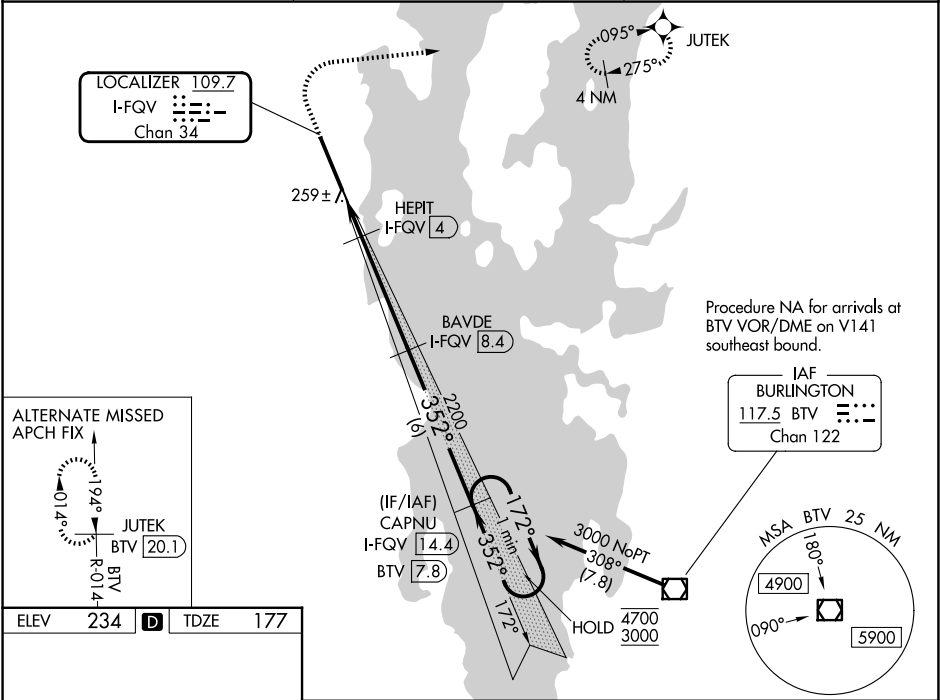

ELEV **234** **D** TDZE **177**

700

3000

JUTEK

One Minute Holding Pattern

*LOC only

BAVDE I-FQV 8.4

CAPNU I-FQV 14.4

172° → 4700

← 352° 3000

GS 3.00°

TCH 55'

CATEGORY	A	B	C	D
S-ILS 35	377-½ 200 (200-½)			
S-LOC 35	520-½	343 (300-½)	520-⅝	343 (300-⅝)
CIRCLING	720-1 486 (500-1)	740-1 506 (600-1)	800-1½ 566 (600-1½)	960-2¼ 726 (800-2¼)