


ATIS ★ 125.55 363.05	[USN]	TACAN required	Rwy	Knots	60	120	180	240	300	360
TOWER ★			* 03 Ⓐ	V/V(fpm)	205	410	615	820	1025	1230
124.85 290.375			† 21 Ⓑ	V/V(fpm)	216	432	648	864	1080	1296
DEP CON ★			† 27 Ⓑ	V/V(fpm)	214	428	642	856	1070	1284
128.65 307.275										

* Minimum

† ATC Climb Rate

Ⓐ to 700

Ⓑ to 8900

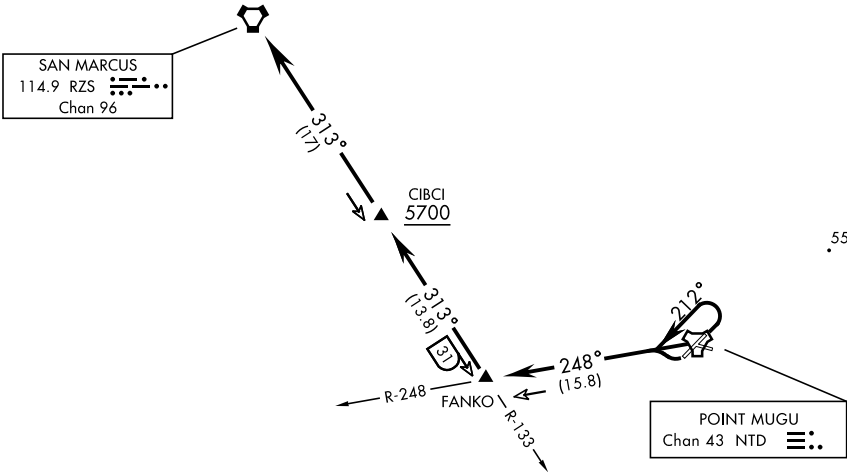

▼

DEPARTURE ROUTE DESCRIPTION

TAKEOFF RWY 3: Climbing left turn to 212° within 3 DME of NTD TACAN, thence...

TAKEOFF RWY 21: Turn right, thence...

TAKEOFF RWY 27: Turn left, thence...

...intercept NTD R-248 and via NTD R-248 to FANKO (NTD R-248/16 DME), then via RZS VORTAC R-133 to RZS VORTAC, then via assigned routing.

Cross CIBCI (RZS R-133/17 DME) at or above 5700.