

LOC I-VPZ
109.7

APP CRS
272°

Rwy Ldg
TDZE
Apt Elev
6500
770
770


ILS or LOC RWY 27
PORTER COUNTY RGNL (VPZ)

ADF required.
▼
▲ For inop ALS, increase S-LOC 27 Cats C and D visibility to 1 SM.

MALSR
AS

MISSED APPROACH: Climb to 1400, then climbing right turn to 2600 direct SEDLY LOM and hold, continue climb-in-hold to 2600.

ASOS 125.875	SOUTH BEND APP CON ★ 132.05 257.8	UNICOM 122.725 (CTAF) 0
------------------------	---	-----------------------------------

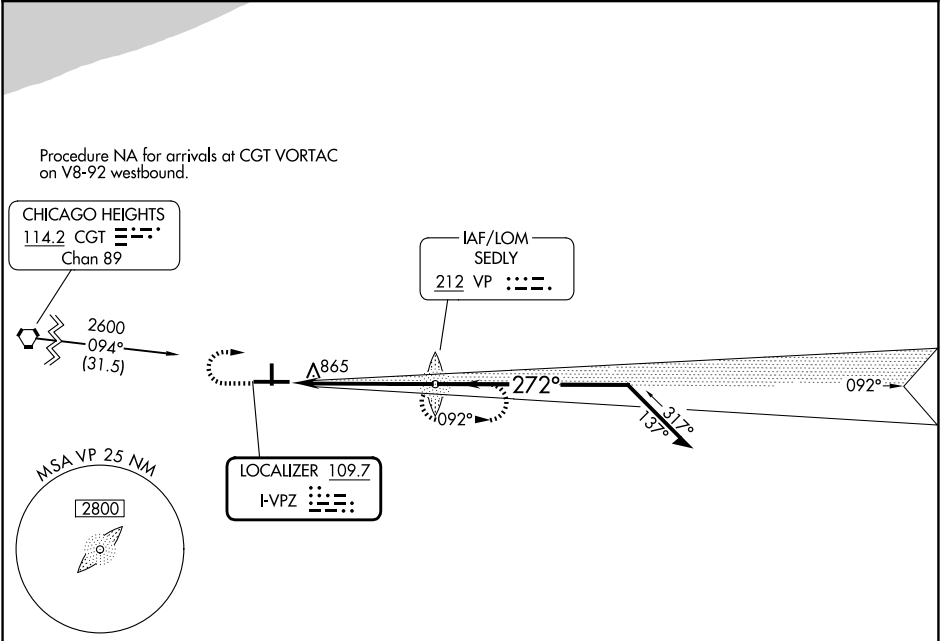

ELEV 770 D TDZE 770

1400 2600 VP

Remain within 10 NM

VP LOM 2528 092° 2600 272° 2600 GS 3.00° TCH 51

5.3 NM

CATEGORY	A	B	C	D
S-ILS 27	970-1/2 200 (200-1/2)			
S-LOC 27	1120-1/2 350 (400-1/2)		1120-5/8 350 (400-5/8)	
CIRCLING	1260-1 490 (500-1)	1300-1 530 (600-1)	1360-1 1/2 590 (600-1 1/2)	1620-2 3/4 850 (900-2 3/4)

HIRL Rwy 9-27
MIRL Rwy 18-36
REIL Rws 9, 18 and 36

FAF to MAP 5.3 NM

Knots	60	90	120	150	180
Min:Sec	5:18	3:32	2:39	2:07	1:46