


VOR/DME GEE	APP CRS	Rwy Ldg TDZE	N/A
108.2	085°		N/A
Chan 19		Apt Elev	814

VOR-A

CANANDAIGUA (IUA)

DME or RADAR required.	MISSED APPROACH: Climb to 2000 then climbing right turn to 3500 direct GEE VOR/DME and hold.
When local altimeter setting not received, use Rochester altimeter setting and increase all MDAs 100 feet and Circling visibility all Cats ¼ SM, increase WIVRI Fix Circling minimums visibility Cat C ½ SM.	

AWOS-3P	ROCHESTER APP CON	UNICOM
118.675	119.55 269.6	122.8 (CTAF) 0

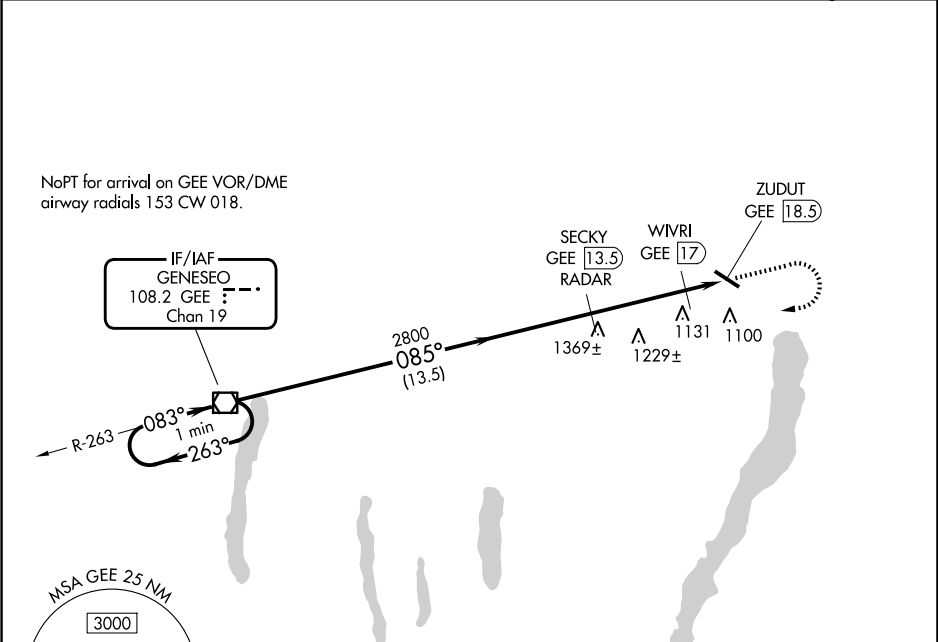

One Minute Holding Pattern				ELEV 814													
CATEGORY				MIRL Rwy 13-31 0													
CIRCLING				REIL Rws 13 and 31 0													
WIVRI FIX MINIMUMS				FAF to MAP 5 NM													
CIRCLING				<table><tr><td>Knots</td><td>60</td><td>90</td><td>120</td><td>150</td><td>180</td></tr><tr><td>Min:Sec</td><td>5:00</td><td>3:20</td><td>2:30</td><td>2:00</td><td>1:40</td></tr></table>		Knots	60	90	120	150	180	Min:Sec	5:00	3:20	2:30	2:00	1:40
Knots	60	90	120	150	180												
Min:Sec	5:00	3:20	2:30	2:00	1:40												