


RNAV 1 - DME/DME/IRU or GPS.  
RADAR required.

NOTE: Jet and turboprop aircraft only.  
NOTE: Expect local area altimeter setting reaching FL200.

SOCAL APP CON  
126.7 370.95  
BUR D-ATIS  
134.5  
VNY ATIS  
127.55  
BURBANK TOWER  
118.7 254.3  
VAN NUYS TOWER ★  
119.3 239.0



BOB HOPE  
VAN NUYS

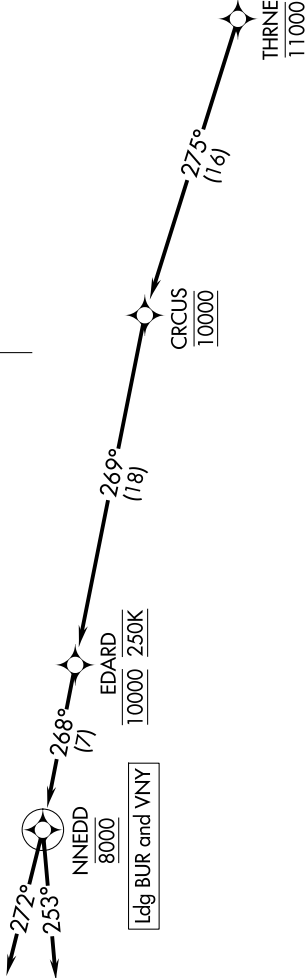

ARRIVAL ROUTE DESCRIPTION

LANDING BUR: From THRNE on track 275° to cross CRCUS at 10000, then on track 269° to cross EDARD at 10000 and at 250K, then on track 268° to cross NNEDD at 8000, then on track 253° . Expect RADAR vectors to final approach course.

LANDING VNY: From THRNE on track 275° to cross CRCUS at 10000, then on track 269° to cross EDARD at 10000 and at 250K, then on track 268° to cross NNEDD at 8000, then on track 272° . Expect RADAR vectors to final approach course.

NOTE: Chart not to scale.