

VOR/DME A

VORTAC CBM 115.2 Chan 99	APCH CRS 090°	Rwy Idg N/A TDZE N/A Arpt Elev 218
--	-------------------------	---

[USAF]


COLUMBUS AFB (KCBM)

T When circling to Rwy 31R at night, operational VGSI required, remain on or above VGSI glidepath until threshold.

MISSED APPROACH: Climbing right turn to intercept the CBM R-224 outbound to JOLI (CBM R-224/15) and hold. Maintain 3000.


ATIS ★	APP CON ★		TOWER ★	GND CON ★
115.2 273.5	N	126.075 239.25	126.65 379.925	121.9 275.8
	SE	134.55 350.3		
	SW	135.6 323.275		

FOR USE BY 14 FTW
ACFT ONLY

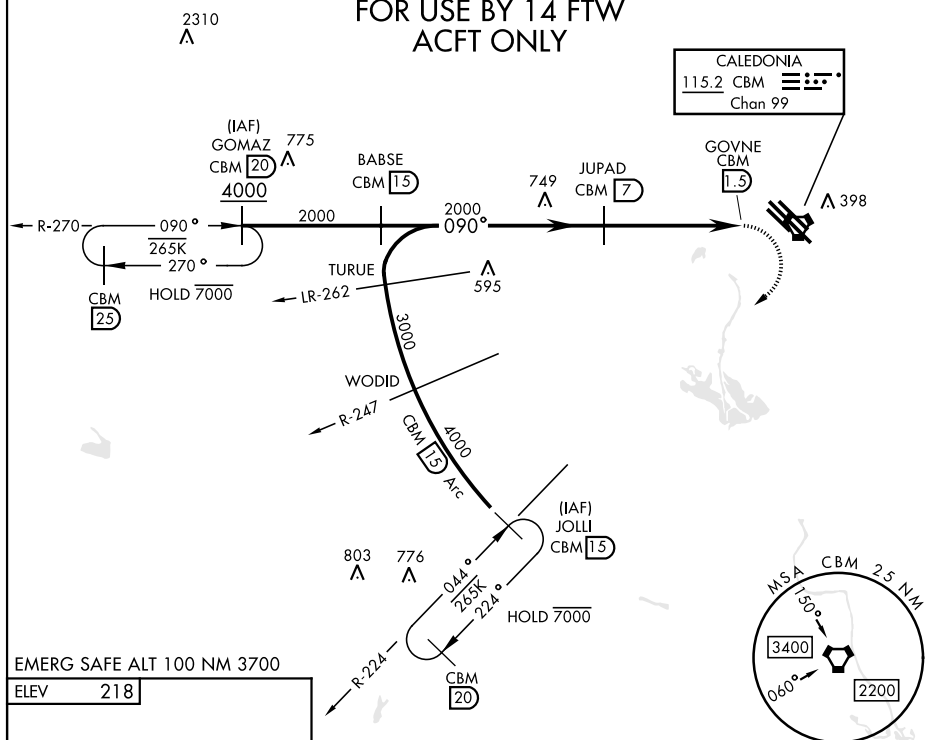


EMERG SAFE ALT 100 NM 3700

ELEV	218
------	-----

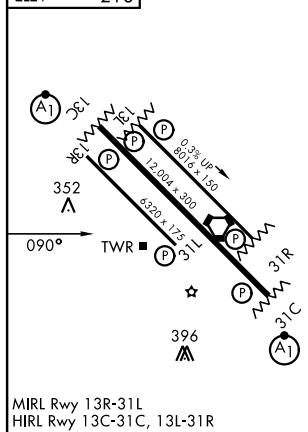

MIRL Rwy 13R-31L
HIRL Rwy 13C-31C, 13L-31R

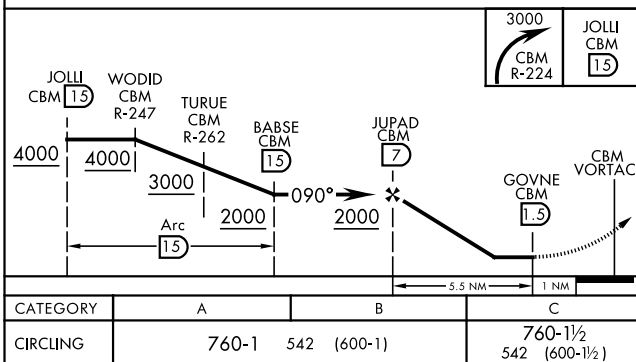

COLUMBUS, M|SS|SS|PP|

33°39'N-88°27'W

COLUMBUS AFB (KCBM)

VOR/DME A