

VOR/DME VCT 109.0 Chan 27	APP CRS 307°	Rwy Ldg TDZE Apt Elev	9111 106 115
--	------------------------	-----------------------------	---


VOR RWY 31

VICTORIA RGNL (VCT)


DME required.

MISSED APPROACH: Climb to 2000 direct VCT VOR/DME and hold.

ATIS 119.025	HOUSTON CENTER 135.05 353.6	VICTORIA TOWER ★ 126.075 (CTAF) 0 257.95	GND CON 120.525 239.25	UNICOM 122.7
------------------------	---------------------------------------	--	----------------------------------	------------------------

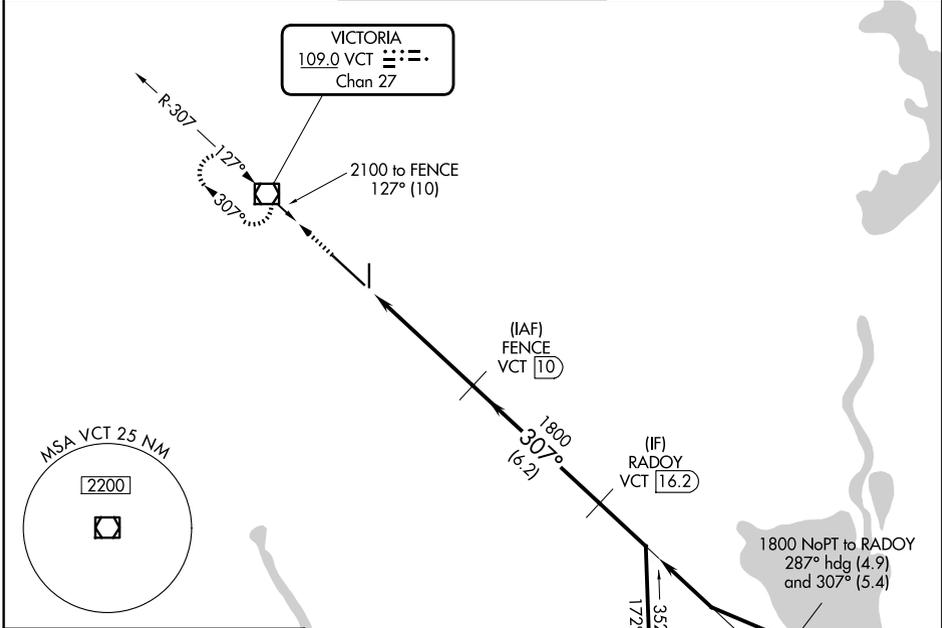

ELEV 115 **D** TDZE 106

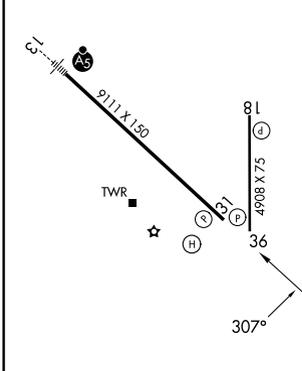

Procedure NA for arrivals at TANNA on V13-407 northeast bound.

2000	VCT	FENCE VCT 10	Remain within 15 NM
	VCT 4.7	VCT 5.9	1800
	1.2 NM	4.1 NM	

CATEGORY	A	B	C	D	E
S-31	540-1	434 (500-1)	540-1¼	434 (500-1¼)	
CIRCLING	580-1	465 (500-1)	820-2 705 (800-2)	880-2½ 765 (800-2½)	NA

MIRL Rwy 18-36
REIL Rwy 18 and 36
HIRL Rwy 13-31