


LOC/DME I-DAL 111.5 Chan 52	APP CRS 133°	Rwy Ldg 7352 TDZE 485 Apt Elev 487
---	------------------------	---

ILS or LOC RWY 13L

DALLAS LOVE FLD (DAL)

RADAR required for procedure entry.		MALSR	MISSED APPROACH: Climb to 1000 then climbing left turn to 3000 on heading 060° and CVE VOR/DME R-087 to SOLDO INT/CVE 28.9 DME and hold.
Simultaneous approach authorized.			

D-ATIS 120.15	LONE STAR APP CON 124.3 282.275 (N) 125.2 343.65 (S)	LOVE TOWER 123.7 239.3	GND CON 121.75 348.6
-------------------------	--	----------------------------------	--------------------------------

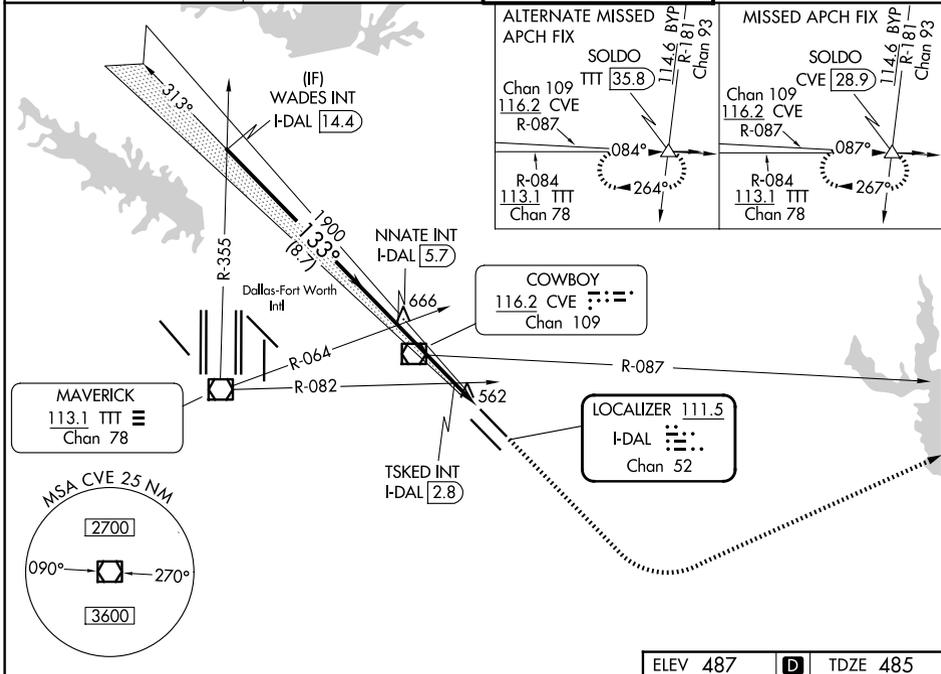

WADES INT I-DAL 14.4	1000	3000	CVE R-087	SOLDO
2500	↑	hdg 060°		△
133°				
1900				
920				
8.7 NM	2.9 NM	0.5	0.9	
GS 3.00° TCH 55				
CATEGORY	A	B	C	D
S-ILS 13L	685/18 200 (200-½)			
S-LOC 13L	920/24	435 (500-½)	920/40	435 (500-¾)
CIRCLING	1000-1 513 (600-1)	1140-1 653 (700-1)	1220-2 733 (800-2)	1520-3 1033 (1100-3)
TSKED FIX MINIMUMS (DUAL VOR RECEIVERS OR DME REQUIRED)				
S-LOC 13L	820/24	335 (400-½)	820/26	335 (400-½)
CIRCLING	1000-1 513 (600-1)	1140-1 653 (700-1)	1220-2 733 (800-2)	1520-3 1033 (1100-3)

