
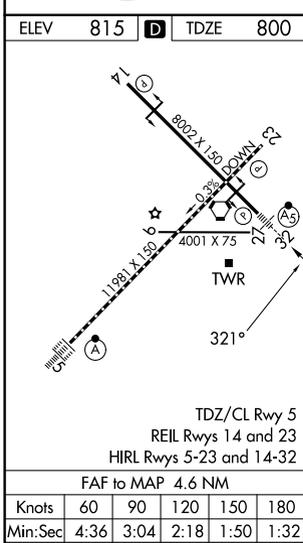


LOC/DME I-FWA <b>109.9</b> Chan 36	APP CRS <b>321°</b>	Rwy Ldg TDZE Apt Elev	<b>8001</b> <b>800</b> <b>815</b>
--	------------------------	-----------------------------	---

# ILS or LOC RWY 32

FORT WAYNE INTL (FWA)

DME required for LOC only. DME or RADAR required for procedure entry.		MALSR 	MISSED APPROACH: Climb to 3000 then left turn on FWA VORTAC R-285 to TELEY INT/FWA 17.5 DME and hold.	
 For inop ALS, increase S-ILS 32 visibility Cat E to RVR 4000 and increase S-LOC 32 visibility Cats C, D, and E to RVR 5500. * RVR 1800 authorized with use of FD or AP or HUD to DA.				
ATIS <b>121.25 360.825</b>	FORT WAYNE APP CON <b>127.2 284.6</b>	FORT WAYNE TOWER <b>119.1 269.325</b>	GND CON <b>121.9 348.6</b>	CLNC DEL <b>124.75</b>

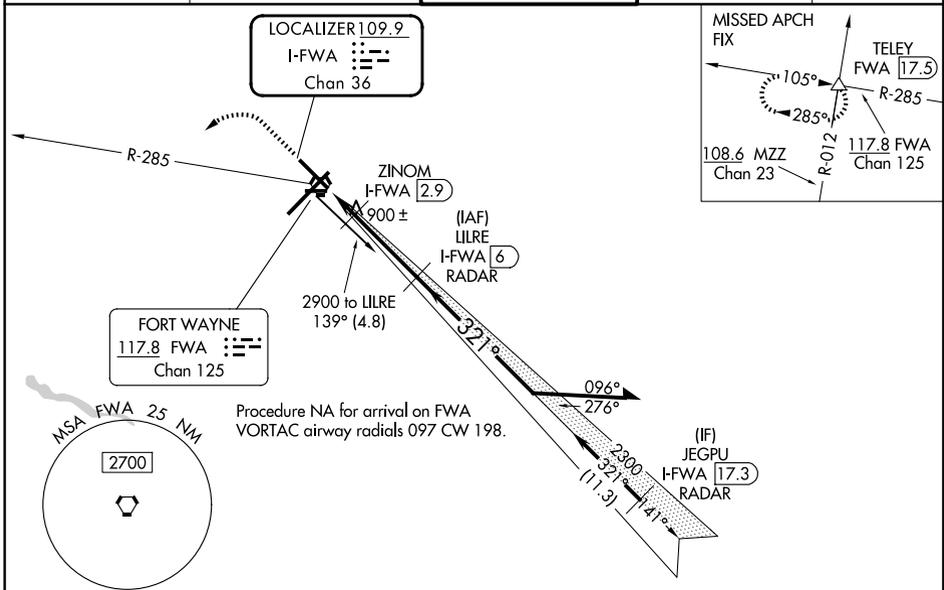

Cat E Procedure Turn NA.

CATEGORY	A	B	C	D	E
S-ILS 32*	1000/24 200 (200-½)				
S-LOC 32	1160/24	360 (400-½)	1160/30	360 (400-¾)	
CIRCLING	1300-1	485 (500-1)	1420-1¾ 605 (700-1¾)	1520-2¼ 705 (800-2¼)	1520-2½ 705 (800-2½)

EC-2, 19 MAR 2026 to 16 APR 2026

EC-2, 19 MAR 2026 to 16 APR 2026