


# ACONY THREE DEPARTURE (RNAV)

**TOP ALTITUDE:  
5000**


D-ATIS 125.8  
 CLNC DEL 126.4 284.6  
 CPDLC  
 SAN JUAN TOWER 132.05 257.8  
 GND CON 121.9 348.6  
 SAN JUAN DEP CON 119.4 269.2 (West & SW)  
 120.9 290.2 (North & East)

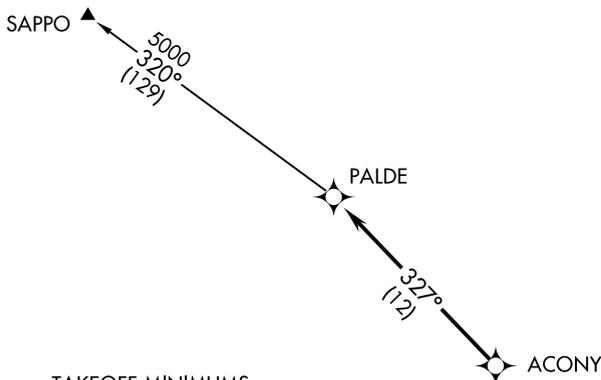

### TAKEOFF MINIMUMS

Rwy 8, 10, 26, 28: Standard.

- NOTE: GPS required.
- NOTE: For jet aircraft only.
- NOTE: RNAV 1.
- NOTE: RADAR required.

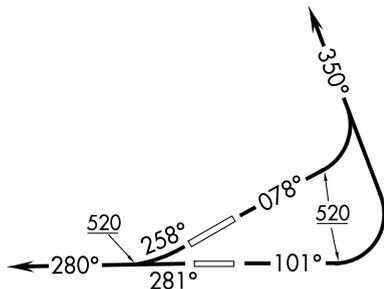

NOTE: Chart not to scale.

### DEPARTURE ROUTE DESCRIPTION

**TAKEOFF RWY 8:** Climb heading 078° to 520, then climbing left turn heading 350° or as assigned by ATC for vectors to ACONY, then on track 327° to PALDE, thence. . . .

**TAKEOFF RWY 10:** Climb heading 101° to 520, then climbing left turn heading 350° or as assigned by ATC for vectors to ACONY, then on track 327° to PALDE, thence. . . .

**TAKEOFF RWY 26:** Climb heading 258° to 520, then climb on heading 280° or as assigned by ATC for vectors to ACONY, then on track 327° to PALDE, thence. . . .

**TAKEOFF RWY 28:** Climb heading 281° to 520, then climb on heading 280° or as assigned by ATC for vectors to ACONY, then on track 327° to PALDE, thence. . . .

. . . .on SAPPO transition, maintain 5000 unless assigned lower altitude. Expect clearance to FL280, or requested altitude if lower, ten minutes after departure.

SAPPO TRANSITION (ACONY3.SAPPO)

# ACONY THREE DEPARTURE (RNAV)