


VOR/DME BAE 116.4 Chan 111	APP CRS 180°	Rwy Ldg TDZE Apt Elev	N/A N/A 780
---	------------------------	-----------------------------	--

VOR-A
BURLINGTON MUNI (BUU)

DME or RADAR required.		MISSED APPROACH: Climb to 2600 then left turn on BAE VOR/DME R-180 to LISSI/20 DME/RADAR and hold.	
Circling NA to Rwys 1 and 19.		AWOS-3 125.275	MILWAUKEE APP CON 135.875 307.0
		GCO 121.725	UNICOM 123.05 (CTAF) 0

Procedure NA for arrival on BAE VOR/DME airway radials 119 CW 226.


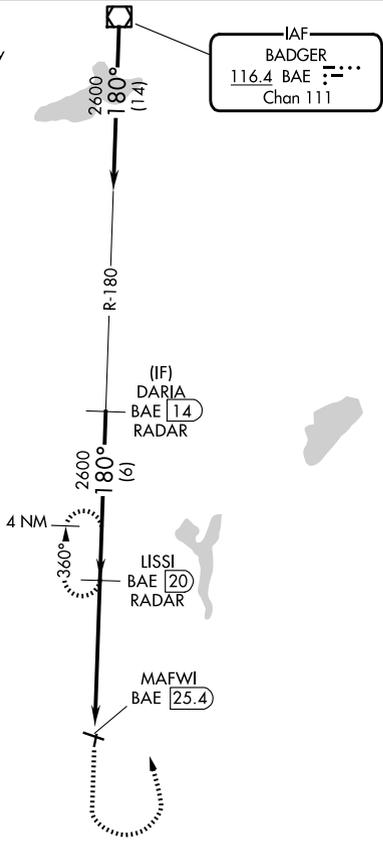


IAF
BADGER
116.4 BAE
Chan 111


(IF)
DARIA
BAE (14)
RADAR

LISSI
BAE (20)
RADAR

MAFWI
BAE (25.4)

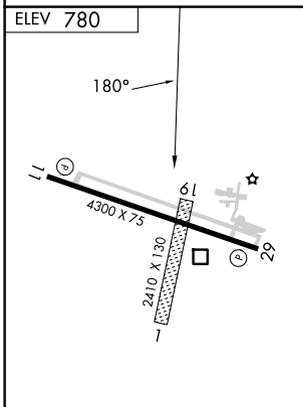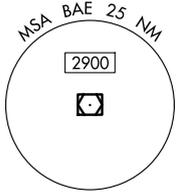

MIRL Rwy 11-29
REIL Rwys 11 and 29

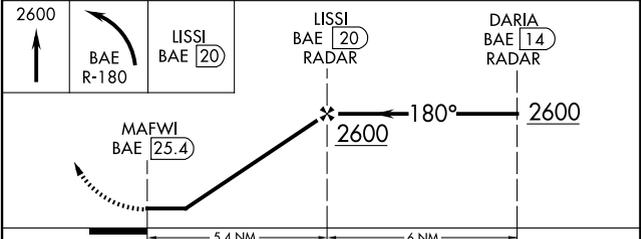

FAF to MAP 5.4 NM		CATEGORY	A	B	C	D
Knots	60 90 120 150 180	CIRCLING	1400-1	620 (700-1)	1400-1 3/4 620 (700-1 3/4)	1560-2 1/2 780 (800-2 1/2)
Min:Sec	5:24 3:36 2:42 2:10 1:48					

EC-3, 19 MAR 2026 to 16 APR 2026

EC-3, 19 MAR 2026 to 16 APR 2026