

APP CRS
333°

Rwy Ldg
TDZE
Apt Elev

5000
999
1009

RNAV (GPS) RWY 33


WORCESTER RGNL (ORH)

RNP APCH.

When local altimeter setting not received, use Bedford altimeter setting and increase all MDAs 200 feet and visibility LNAV Cat C/D ½ SM and visibility Circling Cat B ¼ SM. VDP NA with Bedford altimeter setting.

MISSED APPROACH:
Climbing left turn to 3000
direct GRIPE and hold.

ATIS 126.55	BRADLEY APP CON 119.0 327.1	WORCESTER TOWER ★ 120.5 (CTAF) 263.0	GND CON 123.85	UNICOM 122.95
-----------------------	---------------------------------------	--	--------------------------	-------------------------

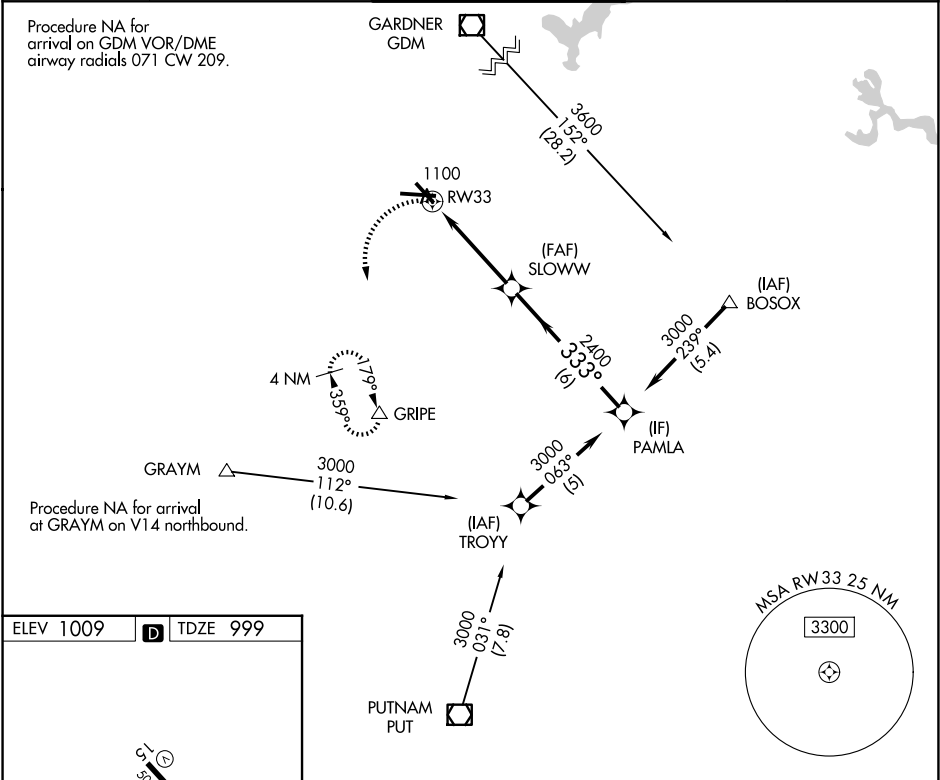

ELEV 1009

D

TDZE 999

TDZ/CL Rwy 11

REIL Rwy 15, 29 and 33

HIRL Rwy 11-29

MIRL Rwy 15-33

3000	GRIPE	Procedure Turn NA		
CATEGORY	A	B	C	D
LNAV MDA	1480-1	482 (500-1)	1480 -1⅓ 482 (500-1⅓)	
CIRCLING	1560-1 551 (600-1)	1720-1 711 (800-1)	2000-3	991 (1000-3)