

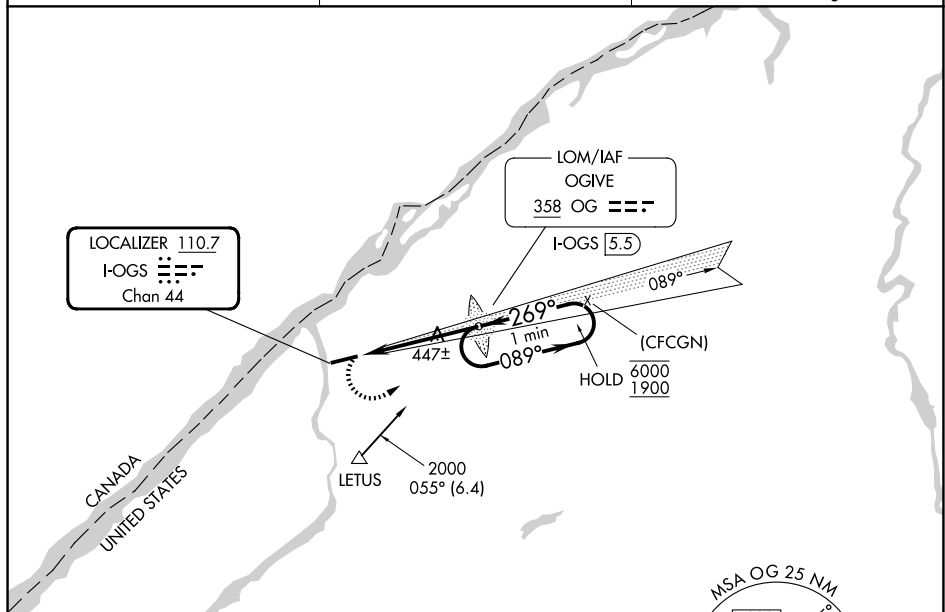
LOC RWY 27
OGDENSBURG INTL (OGS)

MALSF

T
A NA

VDP NA when using Massena altimeter setting. When local altimeter setting not received, use Massena altimeter setting and increase all MDA 100 feet and S-LOC 27 and Circling visibility Cat C/D $\frac{1}{4}$ SM.

MISSED APPROACH: Climbing left turn to 2000 direct OGIVE LOM and hold.

UNICOM
122.8 (CTAF) **L**

ELEV	302	D	TDZE	302
------	-----	----------	------	-----

