

VORTAC FWA

117.8

Chan 125

APP CRS

145°

Rwy Ldg

8001

TDZE

802

Apt Elev

815

VOR or TACAN RWY 14

FORT WAYNE INTL (FWA)

DME required.

ASR

MISSED APPROACH: Climb to 3000 on FWA R-134 to OSBER/FWA 22 DME and hold.

ATIS

121.25 360.825

FORT WAYNE APP CON




127.2 284.6

FORT WAYNE TOWER

119.1 269.325

GND CON

121.9 348.6

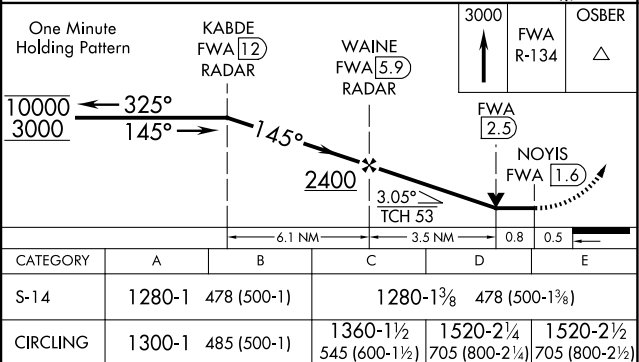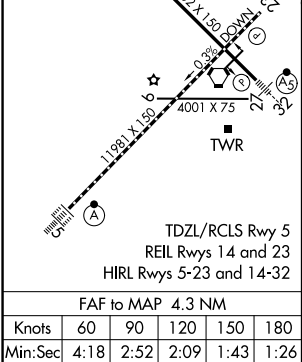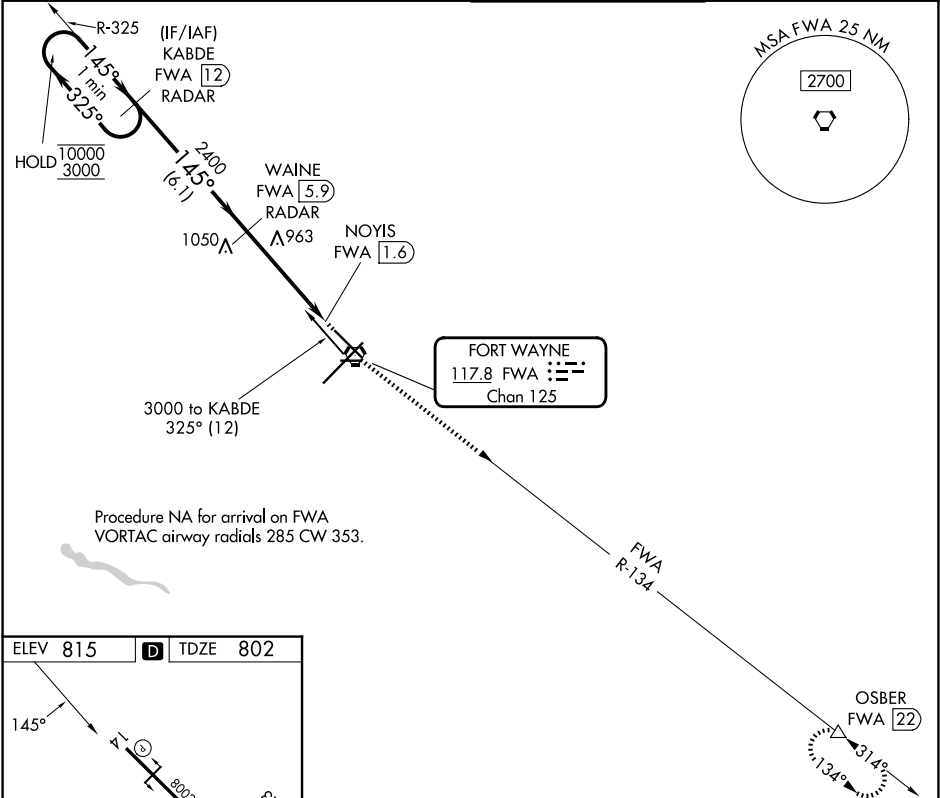

EC-2, 06 AUG 2026 to 03 SEP 2026

EC-2, 06 AUG 2026 to 03 SEP 2026