

VORTAC FWA <u>117.8</u> Chn 125	APP CRS 224°	Rwy Ldg 11981 TDZE 799 Apt Elev 815
---	------------------------	--

VOR or TACAN RWY 23
FORT WAYNE INTL (FWA)


DME required.




ASR

MISSED APPROACH: Climbing left turn to 3000 on FWA VORTAC R-134 to OSBER/FWA 22 DME and hold.

ATIS		FORT WAYNE APP CON		FORT WAYNE TOWER		GND CON	
121.25	360.825	127.2	284.6	119.1	269.325	121.9	348.6

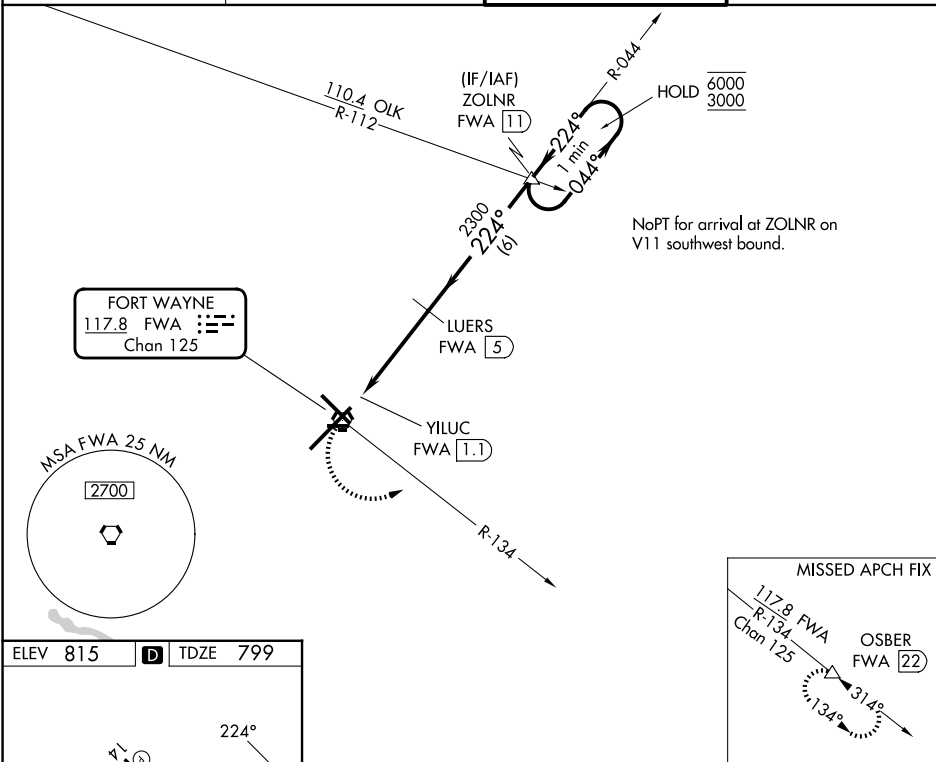

ELEV 815	D	TDZE 799
----------	----------	----------

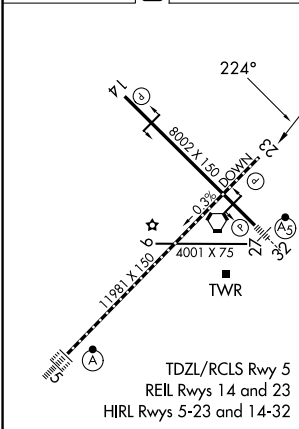

FAF to MAP 3.9 NM					
Knots	60	90	120	150	180
Min:Sec	3:54	2:36	1:57	1:34	1:18

3000 FWA R-134

OSBER

VGS and descent angles not coincident (VGS Angle 3.00/TCH 76)

ZOLNR FWA (11)

One Minute Holding Pattern

LUERS FWA (5)

YILUC FWA (1.1)

FWA 1.8

224°

2300

3.04° TCH 55

0.6 0.8 3.2 NM 6 NM

044° 6000

224° 3000

CATEGORY	A	B	C	D	E
S-23	1300/55	501 (500-1)	1300-1 $\frac{3}{8}$ 501 (500-1 $\frac{3}{8}$)		
CIRCLING	1300-1	485 (500-1)	1360-1 $\frac{1}{2}$ 545 (600-1 $\frac{1}{2}$)	1520-2 $\frac{1}{4}$ 705 (800-2 $\frac{1}{4}$)	1520-2 $\frac{1}{2}$ 705 (800-2 $\frac{1}{2}$)

VOR or TACAN RWY 23