

VORTAC FWA	APP CRS	Rwy Ldg	11981
117.8	054°	TDZE	815
Chan 125		Apt Elev	815

VOR or TACAN RWY 5

FORT WAYNE INTL (FWA)

DME required.

For inop ALS, increase S-5 Cats C/D/E visibility to 1½ SM.



ASR

ALS-F-2

MISSED APPROACH: Climbing right turn to 3000 on FWA R-134 to OSBER/FWA 22 DME and hold.

ATIS 121.25 360.825	FORT WAYNE APP CON 127.2 284.6	FORT WAYNE TOWER 119.1 269.325	GND CON 121.9 348.6
---	--	--	---

Procedure NA for arrival on FWA VORTAC
airway radials 198 CW 285.

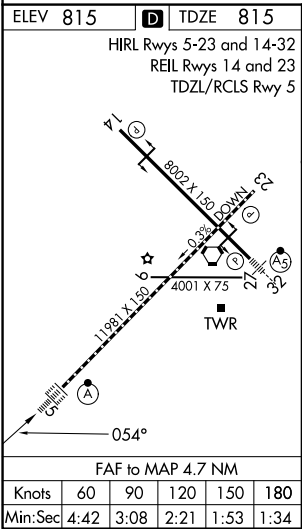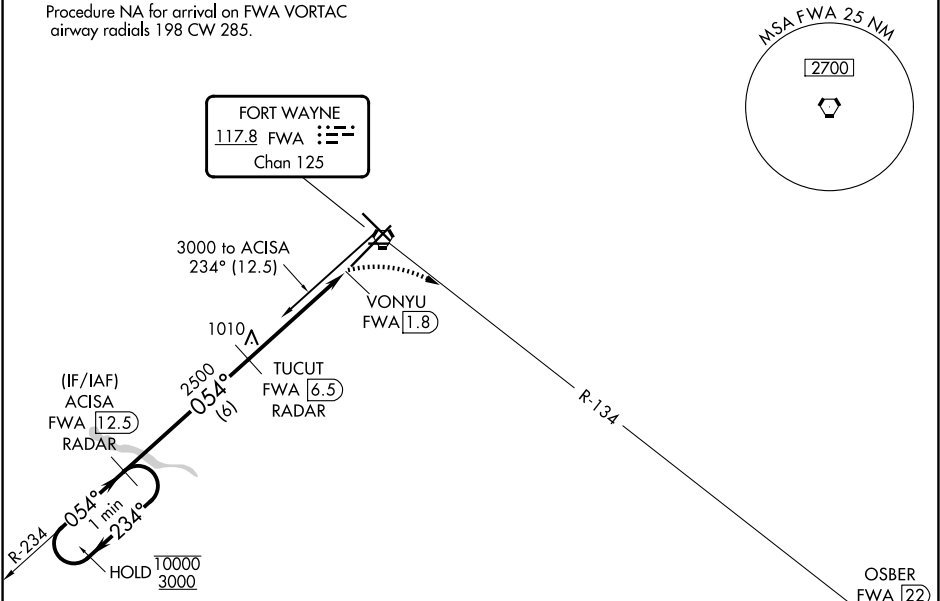

One Minute Holding Pattern		ACISA FWA 12.5 RADAR	TUCUT FWA 6.5 RADAR	3000 FWA R-134	OSBER
10000 3000		234° 054°	054°	2500	3.07° TCH 55
		6 NM	3.6 NM	1.1	0.3
CATEGORY	A	B	C	D	E
S-5	1320/24	505 (600-½)	1320/55	505 (600-1)	
CIRCLING	1320-1	505 (600-1)	1360-1½ 545 (600-1½)	1520-2¼ 705 (800-2¼)	1520-2½ 705 (800-2½)