


LOC/DME I- ACT 109.7 Chan 34	APP CRS 187°	Rwy Ldg TDZE Apt Elev 6605 505 516
---	------------------------	--

ILS or LOC RWY 19
WACO RGNL (ACT)

DME required.	MALSR	MISSED APPROACH: Climb to 1500 then climbing left turn to 4000 on ACT VORTAC R-164 to BOSEL 14 DME and hold, continue climb-in-hold to 4000.
ASR		

ATIS 123.85	WACO APP CON ★ 127.65 227.125	WACO TOWER ★ 119.3 (CTAF) 0 257.8	GND CON 121.9	UNICOM 122.95
-----------------------	---	---	-------------------------	-------------------------

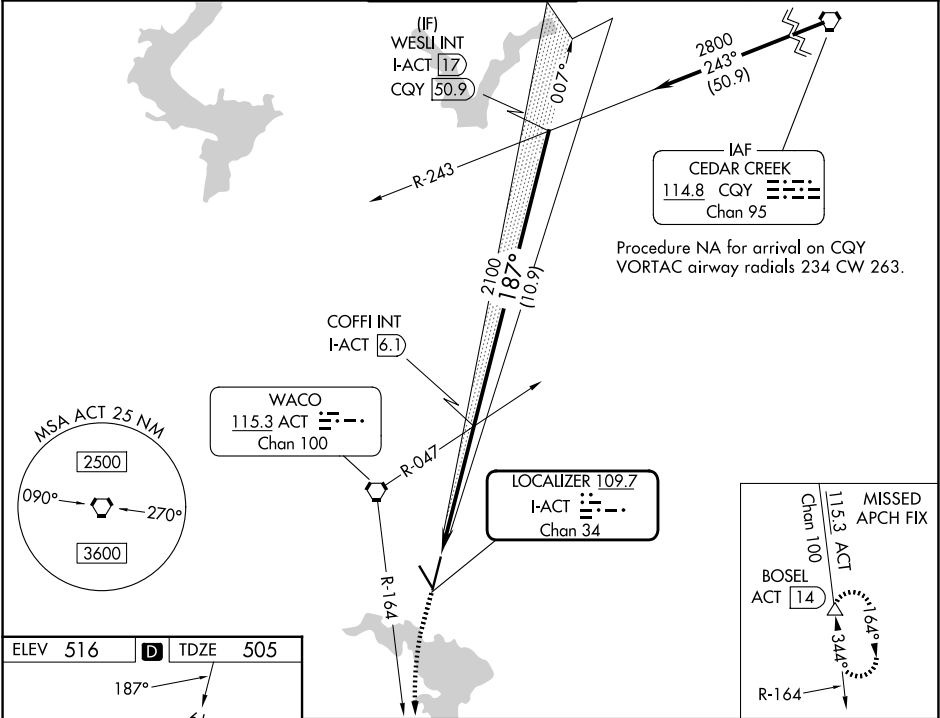

ELEV 516	TDZE 505
187°	61
7107 X 150	TWR
5103 X 150	REIL Rwy 14
5103 X 150	HIRL Rwy 1-19
5103 X 150	MIRL Rwy 14-32
FAF to MAP 4.9 NM	
Knots	60 90 120 150 180
Min:Sec	4:54 3:16 2:27 1:58 1:38

1500 ↑ ACT R-164	4000 ↻ ACT R-164	BOSEL △	WESLI INT I- <u>ACT</u> 17	
*LOC only.			COFFI INT I- <u>ACT</u> 6.1	
*I- <u>ACT</u> 2.3		2100	187°	2800
I- <u>ACT</u> 1.3		2100	GS 3.00° TCH 55	
1.1		3.8 NM	10.9 NM	
CATEGORY	A	B	C	D
S-ILS 19**	705/24 200 (200-½)			
S-LOC 19	900/24 395 (400-½)		900/35 395 (400-¾)	
CIRCLING	940-1 424 (500-1)	980-1 464 (500-1)	1020-1½ 504 (600-1½)	1160-2 644 (700-2)