


ILS or LOC RWY 12

MISSED APPROACH: Climb to 500 then climbing right turn to 3000 direct SBI VOR/DME and hold.



SABINE PASS
SBI $\div \dots$
115.4
Chan 101

500	3000	SBI
		

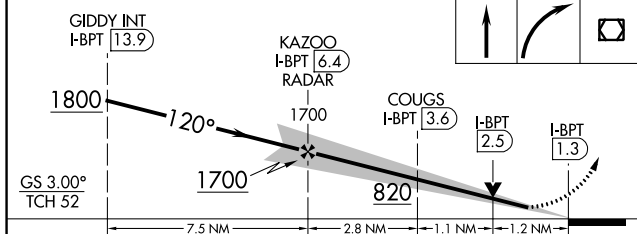

ELEV 15

D TDZE 15

REIL Rwys 16, 30 and 34
HIRL Rwys 12-30, 16-34

FAF to MAP 5.1 NM					
Knots	60	90	120	150	180
Min:Sec	5:06	3:24	2:33	2:02	1:42