


LOC/DME I-CVN 108.9 Chan 26	APP CRS 037°	Rwy Ldg TDZE Apt Elev 7200 4205 4216
---	------------------------	--

ILS or LOC RWY 4

CLOVIS RGNL (CVN)

DME required.	MALSR	MISSED APPROACH: Climb to 4700 then climbing right turn to 6000 direct TXO VORTAC and hold.
NA Circling NA to Rwys 8 and 26. For inop ALS, increase S-LOC 4 Cats C/D visibility to 1 SM.	AS	
AWOS-3PT 135.375	CANNON APP CON 118.425 352.1	UNICOM 122.8 (CTAF)

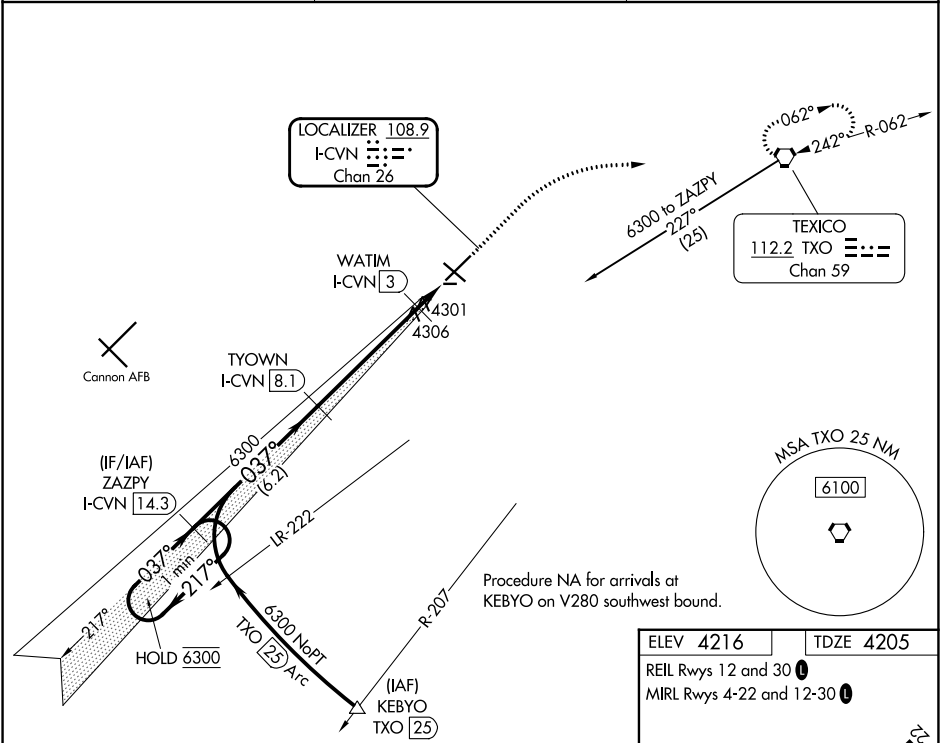

Use I-CVN DME when on the localizer course.				
One Minute Holding Pattern				
6300 217° 037° 6300 6300 4700 6.2 NM 5 NM 1.4 NM				
GS 3.00° TCH 53				
CATEGORY	A	B	C	D
S-ILS 4	4405-1/2		200 (200-1/2)	
S-LOC 4	4560-1/2	355 (400-1/2)	4560-5/8	355 (400-5/8)
CIRCLING	4680-1	464 (500-1)	4700-1 1/2 484 (500-1 1/2)	4820-2 604 (700-2)

ELEV 4216	TDZE 4205
REIL Rwys 12 and 30	
MIRL Rwys 4-22 and 12-30	
12 7200 X 150 5607 X 100 0.5% UP 0.4% UP 2442 X 75 Ultralight Rwy 037°	
FAF to MAP 6.4 NM	
Knots	60 90 120 150 180
Min:Seq	6:24 4:16 3:12 2:34 2:08