
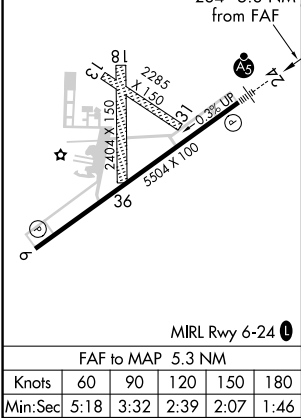


LOC/DME I-PJE 108.3 Chan 20	APP CRS 234°	Rwy Idg TDZE Apt Elev	5504 847 859
---	------------------------	-----------------------------	---

ILS or LOC RWY 24
ALBERTUS(FEP)

DME required.		MALSR	MISSED APPROACH: Climb to 1400 then climbing right turn to 2600 on JVL VOR/ DME R-221 to ADOSE/ I-PJE 12.5 DME and hold.
V NA VDP NA when using Chicago/Rockford altimeter setting. Circling NA to Rwy's 13, 18, 31, 36. For inop ALS when using Chicago/Rockford altimeter setting, increase S-ILS 24 all Cots visibility to 7/8 SM. When local altimeter setting not received, use Chicago/Rockford altimeter setting: increase all DA to 1114 feet; increase all MDA 80 feet and S-LOC 24 Cat C/D visibility 1/8 SM and Circling Cat C/D 1/4 SM.			
AWOS-3 120.525	ROCKFORD APP CON 126.0 327.0	CINC DEL 121.85	UNICOM 122.8 (CTAF)

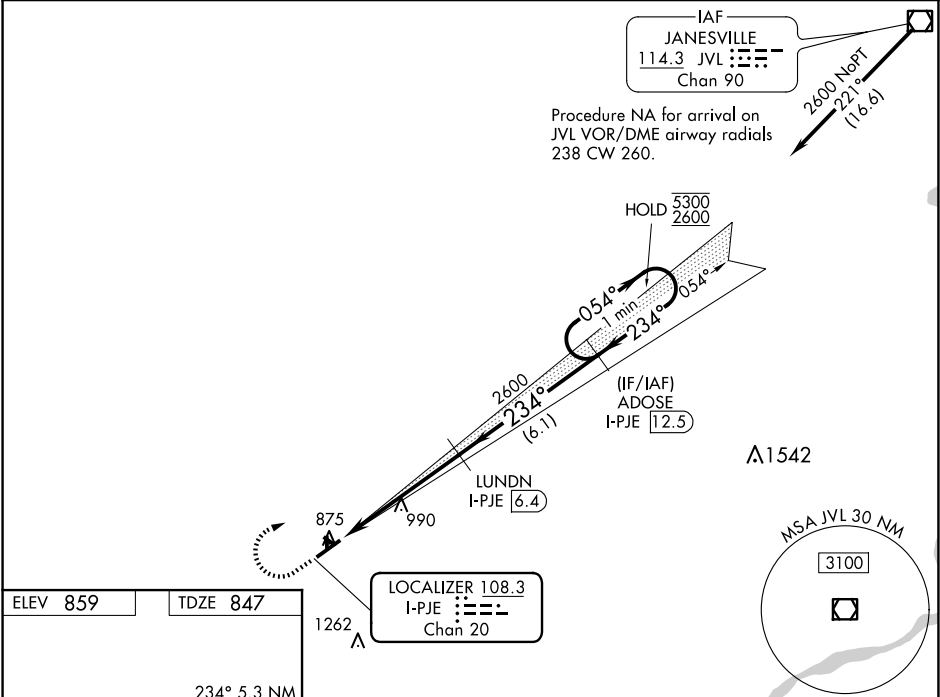

1400 ↑	2600 ↻ JVL R-221	ADOSE I-PJE 12.5		LUNDN I-PJE 6.4		ADOSE I-PJE 12.5		One Minute Holding Pattern	
CATEGORY	A		B		C		D		
S-ILS 24	1047-1/2 200 (200-1/2)								
S-LOC 24	1300-1/2 453 (500-1/2)				1300-7/8 453 (500-7/8)				
CIRCLING	1320-1 461 (500-1)		1400-1 541 (600-1)		1440-1 1/2 581 (600-1 1/2)		1620-2 1/2 761 (800-2 1/2)		