

VOR XUB
112.5

APP CRS
204°

Rwy Idg
5405
TDZE
716
Apt Elev
725

VOR RWY 23
ROSS COUNTY (R/ZT)


▼

NA

When local altimeter setting not received, use Rickenbacker Intl altimeter setting. When VGSI is inop, Straight-in and Circling Rwy 23 procedures NA at night.

MISSED APPROACH: Climb to 3000 then right turn direct XUB VOR and hold.

AWOS-3 119.225	COLUMBUS APP CON 134.0 279.6	UNICOM 122.8 (CTAF)	123.0 0
-------------------	---------------------------------	------------------------	---------

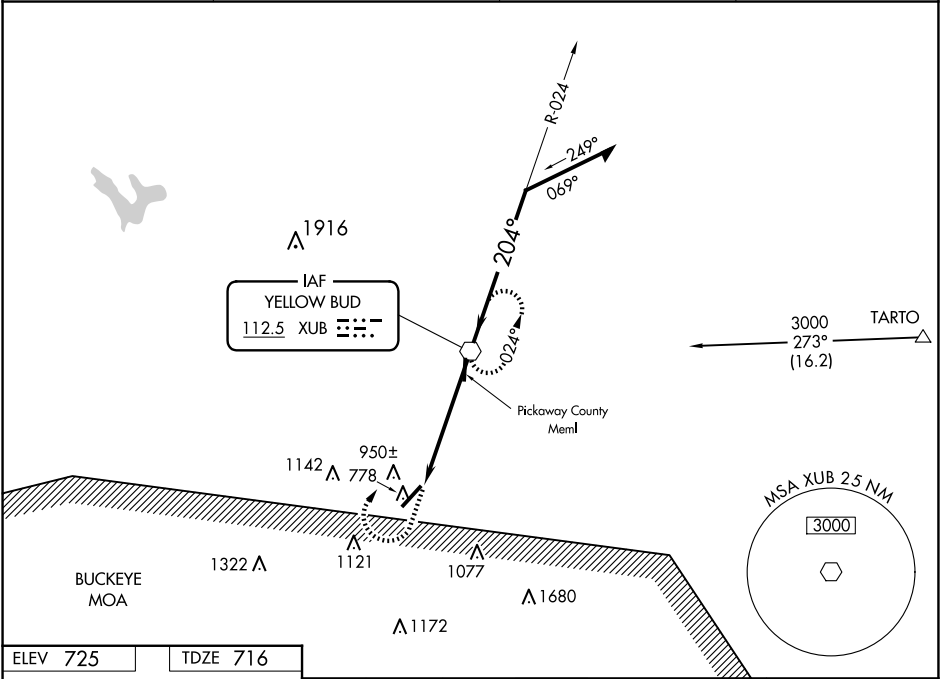

ELEV 725	TDZE 716
----------	----------

3000

↑

XUB

204°

5405 x 100

0.4% UP

XUB VOR

Remain within 10 NM

3000

2300

024°

204°

≤ 2.82° TCH 45

5.2 NM

CATEGORY	A	B	C	D
S-23	1220-1	504 (500-1)	1220-1½	504 (500-1½)
CIRCLING	1340-1 615 (700-1)	1360-1 635 (700-1)	1500-2¼ 775 (800-2¼)	1540-2¾ 815 (900-2¾)
RICKENBACKER INTL ALTIMETER SETTING MINIMUMS				
S-23	1280-1	564 (600-1)	1280-1⅝	564 (600-1⅝)
CIRCLING	1400-1 675 (700-1)	1420-1 695 (700-1)	1560-2½ 835 (900-2½)	1600-2¾ 875 (900-2¾)

FAF to MAP 5.2 NM

Knots	60	90	120	150	180
Min:Sec	5:12	3:28	2:36	2:05	1:44

REIL Rwys 5 and 23 0
MIRL Rwy 5-23 0