


ILS or LOC RWY 17L
OKC WILL ROGERS INTL (OKC)

MALSR

MISSED APPROACH: Climb to 5000 on heading 180° and on IRW VORTAC R-168 to JAVXE/IRW 11.6 DME and hold, continue climb-in-hold to 5000.

GND CON	
121.9	348.6

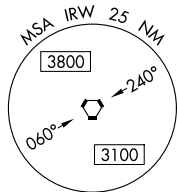


MISSED APCH FIX


JAVXE
RW 11.6
W 114.1
Chan 88

One Minute Holding Pattern

Use I-EXR DME when on the localizer course.

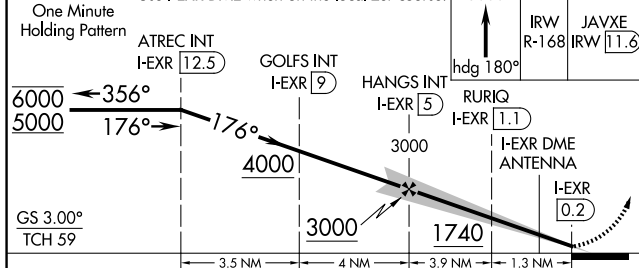

ELEV	1296	D	TDZE	1287
------	------	----------	------	------

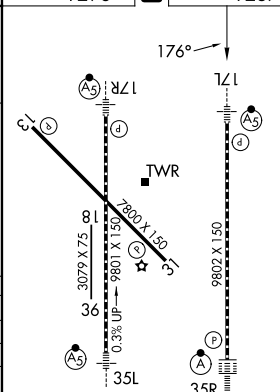

MIRL Rwy 13-31
TDZL/RCLS Rwy 35R
HIRL Rwys 17L-35R and 17R-35L
REIL Rwys 13 and 31