


HI-ILS Y or LOC Y RWY 13R


LOC/DME I-NQI 110.9 Chan 46	APCH CRS 130°	Rwy Idg TDZE Arpt Elev 8000 50 50	[USN]	KINGSVILLE NAS (KNQI)
---	-------------------------	---	-------	-----------------------

TACAN required	MISSED APPROACH: Climb to 500 then climbing right turn to 3000 and intercept NQI TACAN R-184 to BRAMA and hold.
----------------	---

ATIS ★ 282.25	APP CON 119.9 290.45	TOWER ★ 124.1 377.05	GND CON 239.05	CLNC DEL 328.4	ASR/ PAR
-------------------------	--------------------------------	--------------------------------	--------------------------	--------------------------	-------------

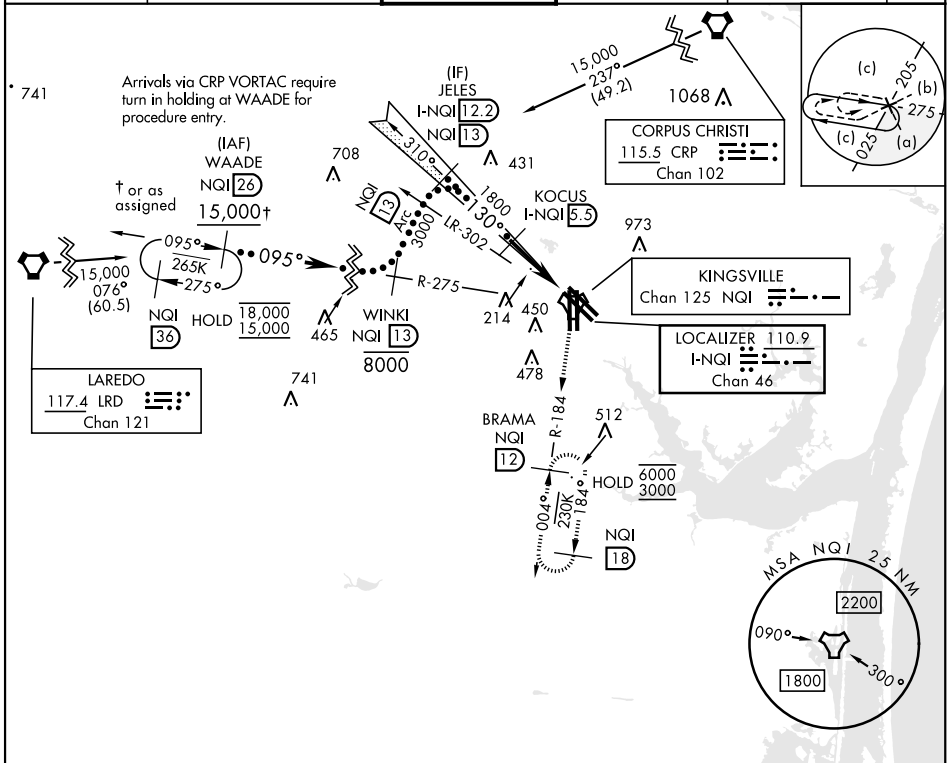

EMERG SAFE ALT 100 NM 16,200	ELEV 50	TDZE 50
------------------------------	---------	---------

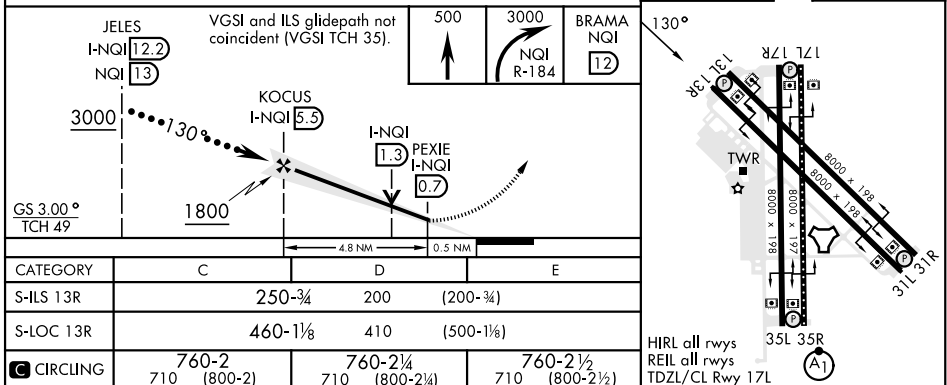

HI-ILS Y or LOC Y RWY 13R