


LOC/DME	I-RUT	APP CRS	Rwy Ldg	5004
111.7		194°	TDZE	787
Chan 54			Apt Elev	787

ILS Y or LOC Y RWY 19

RUTLAND/SOUTHERN VERMONT RGNL (RUT)

DME required.	MALSRR	MISSED APPROACH: Climb to 2840 then climbing right turn to 5700 on heading 360° and CAM VOR/DME R-033 to KOPVE/I-RUT 16.3 DME and hold.
Circling to Rwy 13, 31 NA at night. Circling NA northeast of Rws 19 and 31. Inop table does not apply to S-ILS 19 all Cats, S-LOC 19 Cats C/D.		

AWOS-3PT	BOSTON CENTER	UNICOM
118.375	135.7 282.2	122.8 (CTAF) 0

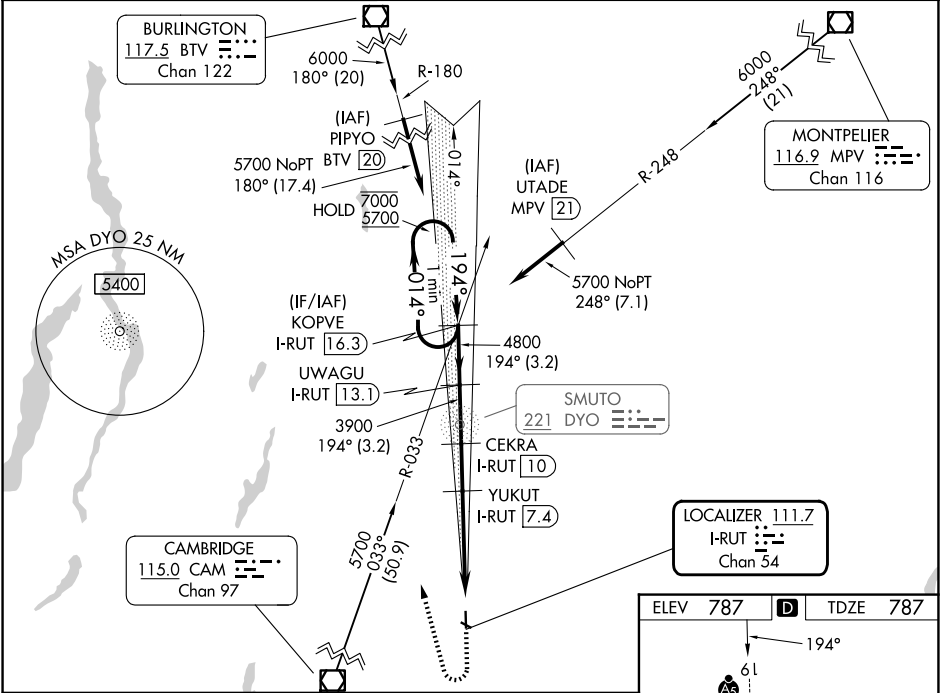

KOPVE I-RUT 16.3		2840	5700	CAM R-033	KOPVE I-RUT 16.3
One Minute Holding Pattern					
7000 ← 014°					
5700 → 194°					
GS 3.20°					
TCH 54					
3.2 NM		3.2 NM	2.5 NM	3.5 NM	3 NM
KOPVE I-RUT 16.3		UWAGU I-RUT 13.1	CEKRA I-RUT 10	YUKUT I-RUT 7.4	I-RUT 3.9
4800		3900	*3040	I-RUT 0.9	
*LOC only					
CATEGORY	A	B	C	D	
S-ILS 19	2162-5 1375 (1400-5)				
S-LOC 19	2160-¾ 1373 (1400-¾)	2160-1 1373 (1400-1)	2160-3 1373 (1400-3)		
CIRCLING	2160-1¼ 1373 (1400-1¼)	2160-1½ 1373 (1400-1½)	2520-3 1733 (1800-3)	2760-3 1973 (2000-3)	