


FORT WORTH, TEXAS

RNAV 1 - DME/DME/IRU or GPS.
RADAR required.

NOTE: AXXEE and RRONY Transitions:
For aircraft filing FL230 and below.

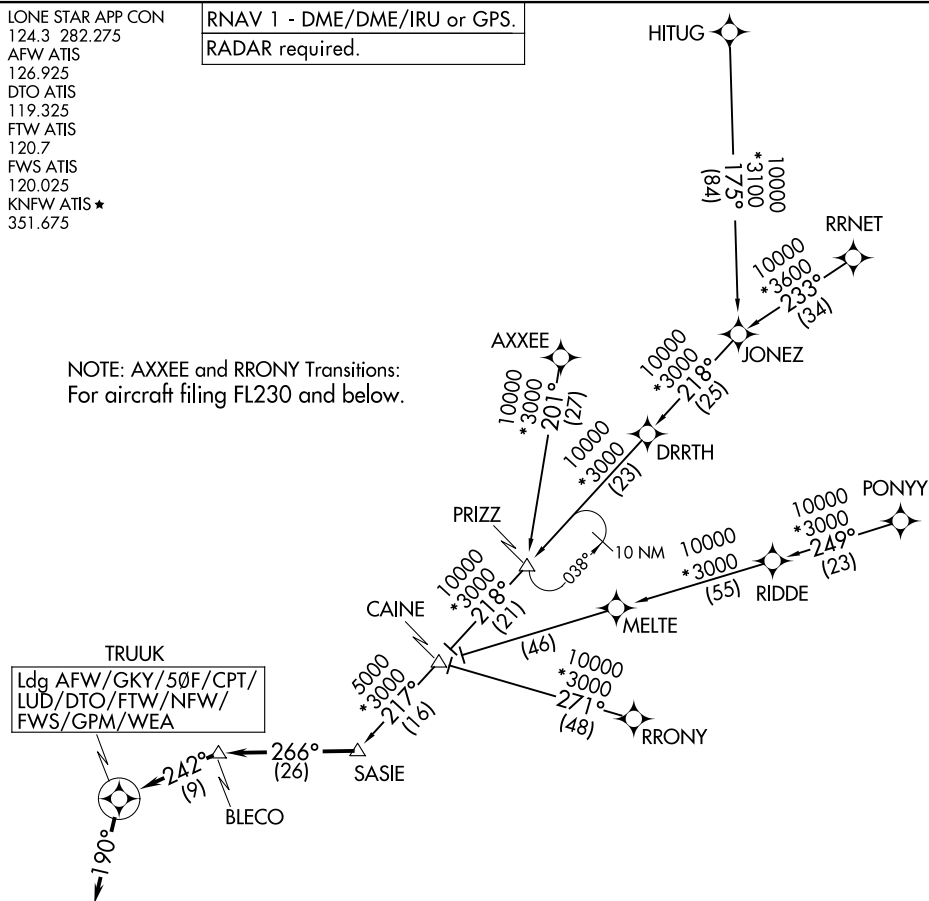

ARRIVAL ROUTE DESCRIPTION

- AXEE TRANSITION (AXEE.TRUUK3)
HITUG TRANSITION (HITUG.TRUUK3)
PONY TRANSITION (PONY.TRUUK3)
RRNET TRANSITION (RRNET.TRUUK3)
RRONY TRANSITION (RRONY.TRUUK3)

LANDING ALL AIRPORTS: From SASIE on track 266° to BLECO, then on track 242° to TRUUK, then on track 190°. Expect RADAR vectors to final approach course.

NOTE: Chart not to scale.

FORT WORTH, TEXAS

(SASIE.TRUUK3) 02OCT25